XR-7077

SERVICE MANUAL

US Model

SPECIFICATIONS

AUDIO POWER SPECIFICATIONS

POWER OUTPUT AND TOTAL HARMONIC DISTORTION 10 watts per channel minimum continuous average power into 4 ohms, both channels driven, from 30 – 20,000 Hz with no more than 1% total harmonic distortion.

Power amplifier section

Outputs — Speaker outputs (sure seal connectors)
Speaker impedance — 3.2 – 8 ohms
Maximum power output — 20 W × 4 (at 4 ohms)*
*Measured at 14.4 V

Cassette player section

Tape track — 4-track 2-channel stereo
Frequency response — 30 – 18,000 Hz
Signal-to-noise ratio

Cassette type	Dolby B	Dolby off
TYPE II, IV	66 dB	58 dB
TYPE I	63 dB	55 dB

Wow and flutter — 0.13% (WRMS)

Tuner section

FM

Tuning range — 87.9 – 107.9 MHz
Antenna terminal — External antenna connector
Intermediate-frequency — 10.7 MHz
Usable sensitivity — 12 dBf (75 ohms)
Selectivity — 75 dB at 400 kHz
Signal-to-noise ratio — 65 dB (stereo), 70 dB (mono)
Harmonic distortion at 1 kHz — 0.5% (stereo), 0.3% (mono)
Separation — 35 dB at 1 kHz
Frequency response — 30 – 15,000 Hz
Capture ratio — 2 dB

AM

Tuning range — 530 – 1,710 kHz
Antenna terminal — External antenna connector
Intermediate frequency — 450 kHz
Sensitivity — 35μV

Model Name Using Similar Mechanism	NEW
Tape Transport Mechanism Type	MG-38AKV-34

General

Output lead — Power antenna relay control lead
Power amplifier control lead
Tone controls — Bass ±10 dB at 100 Hz
Treble ±10 dB at 10 kHz
Loudness — +6 dB at 100 Hz
+6 dB at 10 kHz
Power requirements — 12 V DC car battery (negative ground)
Dimensions (without bracket) — Approx. 178 × 50 × 167 mm (w/h/d) ($7^1/_8 \times 2 \times 6^5/_8$ inches) not incl. projecting parts and controls
Mounting dimensions — Approx. 182 × 53 × 145 mm (w/h/d) ($7^1/_4 \times 2^1/_8 \times 5^3/_4$ inches) not incl. projecting parts and controls
Weight — Approx. 2 kg (4 lb. 7 oz.)
Accessories supplied — Mounting hardware (1 set)

Design and specifications subject to change without notice.

Dolby noise reduction manufactured under license from Dolby Laboratories Licensing Corporation.
"DOLBY" and the double-D symbol ⧈ are trademarks of Dolby Laboratories Licensing Corporation.

FM/AM CASSETTE CAR STEREO

SONY®

TABLE OF CONTENTS

Section	Title	Page
	Specifications	1
1.	**GENERAL**	
	Location and Function of Controls	3
	Installation	4
	Connections	6
	Tape Playback	7
	Automatic Tuning	8
	Manual Tuning	8
	Memory Preset Tuning	9
	Disc Playing	10
2.	**DISASSEMBLY**	11
3.	**ADJUSTMENTS**	
3-1.	Mechanical Adjustments	13
3-2.	Electrical Adjustments	13
4.	**DIAGRAMS**	
	IC301 (μPD75116GF-625-3BE) Description	17
	IC Block Diagrams	20
4-1.	Tuner Section Schematic Diagrams	22
4-2.	Main Section Printed Wiring Boards	25
4-3.	Mani Section Schematic Diagram	29
5.	**EXPLODED VIEWS**	34
6.	**ELECTRICAL PARTS LIST**	40
	Mounting Hardware	46

Location and Function of Controls

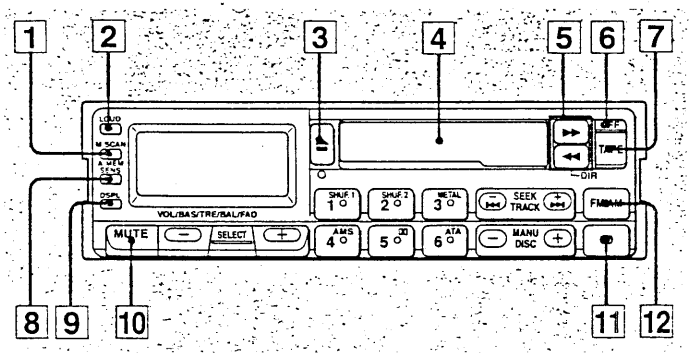

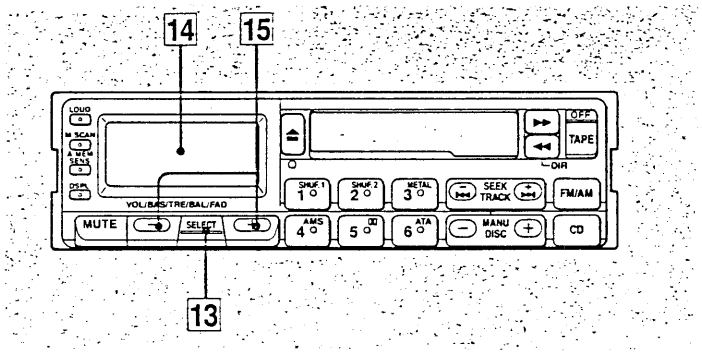

1 M.SCAN (memory scan)/A.MEM (automatic memory) button

2 LOUD (loudness) button
Press to reinforce bass and treble especially when listening at low volume. To disengage the button, press it again.

3 ⏏ (eject) button

4 Cassette insertion door

5 ◀◀ / ▶▶ (fast-winding) buttons/DIR (tape transport direction change) buttons

6 OFF button

7 TAPE (tape playback) button

8 SENS (sensitivity) button

9 DSPL (display) button

10 MUTE button
Press to momentarily mute the sound. Press again to restore the same level as before. This button will be canceled also when you press the (+) button, or when you press the CD, FM/AM or TAPE button to change the operation mode.

11 CD (disc play) button

12 FM/AM (radio on/band select) button

13 SELECT (control mode select) button
Press to select the desired mode, BAS (bass), TRE (treble), BAL (balance), FAD (fader), or VOL (volume).

Display window	Control mode	(−) SELECT (+) Press (−)	Press (+)
BAS	Bass control	For less bass	For more bass
TRE	Treble control	For less treble	For more treble
BAL	Balance control	To decrease the right-speaker volume	To decrease the left-speaker volume
FAD	Fader control	To decrease the rear-speaker volume	To decrease the front-speaker volume
VOL	Volume control	For less volume	For more volume

14 Display window

15 (−) (+) (volume/bass/treble/balance/fader control) button
(−) (+) buttons normally function as the volume control. Adjust the level within three seconds after selecting the desired control mode. Otherwise, the mode goes back to the volume control mode.

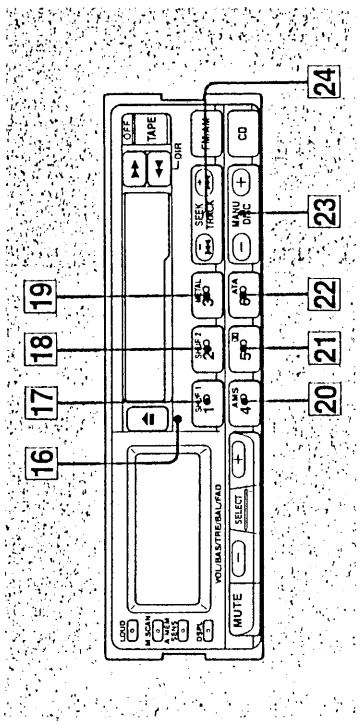

16 Reset button
Press this button when you use this unit for the first time and when you have changed the car battery, or when other buttons do not function. The reset button is effective only when the unit is mounted in the bracket.

	During tape playback	During disc play	During radio reception
17	—	SHUF. 1 (shuffle 1) button	Preset number buttons
18	—	SHUF. 2 (shuffle 2) button	
19	METAL (metal/CrO_2) button	—	
20	AMS (Automatic music sensor) button	—	
21	DD (Dolby NR) button	—	
22	ATA (Automatic tuner activation) button		
23	—	DISC (disc change) /MANU (manual search) button	MANU (manual tuning) button
24	—	TRACK (disc track change) button	SEEK (automatic tuning) button

To mute the beep sound
Press [6 ATT] button while pressing SELECT.
To obtain the beep sound again, press buttons again.

Installation

Precautions

- Choose the mounting location carefully so that the unit will not interfere with the normal driving functions of the driver.
- Avoid installing the unit where it should be subject to high temperatures, such as from direct sunlight or from hot air from the heater, or where it would be subject to dust, dirt or excessive vibration.
- Use only the supplied mounting hardware for a safe and secure installation.

Note on the carrying handle
The unit can be installed with or without the carrying handle. When you want to take the unit with you when you leave your car, install the unit with the carrying handle (see instruction 3A). If not, install it without the carrying handle (see instruction 3B).

Supplied Mounting Hardware

The numbers in the list are keyed to those in the instructions.

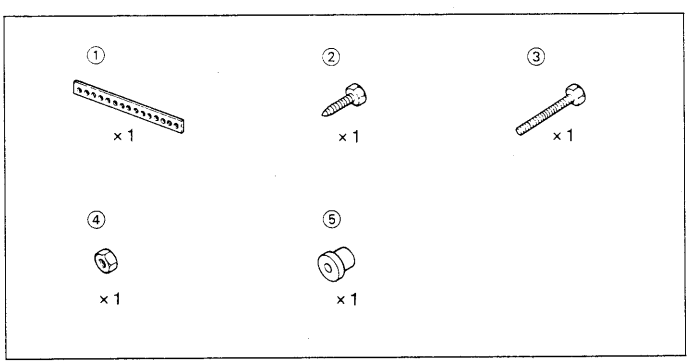

1 Remove the unit from the bracket.

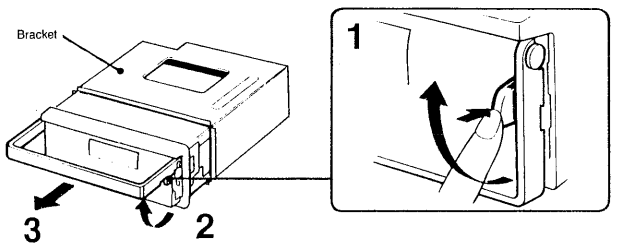

2 Install the bracket in the dashboard.

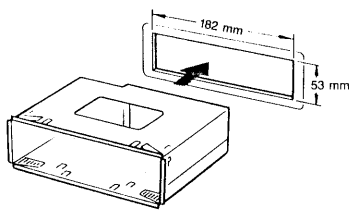

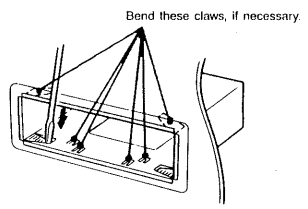

Example 1

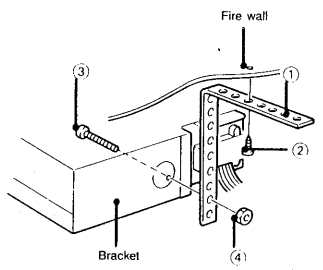

Example 2

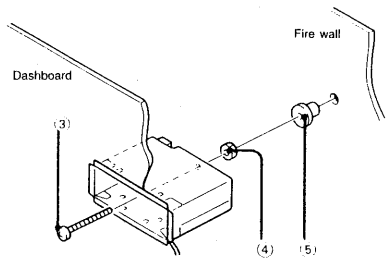

3 Push in the unit until it is locked firmly.

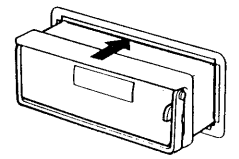

To Remove the Unit

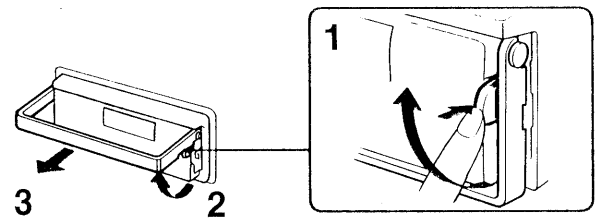

To prevent the unit from being stolen
When you leave your car, remove the unit from the bracket and take it away with you.

Connections

Caution

- This unit is designed for negative ground 12 V DC operation only.
- Before making connections, disconnect the ground terminal of the car battery to avoid short circuits.
- Connect the **red** power input lead only after all other leads are connected. And be sure to connect it to the positive 12 V power terminal. It will be energized when the ignition key is set to the accessory position.
- **Run all ground wires to a common ground point.**

System Connection

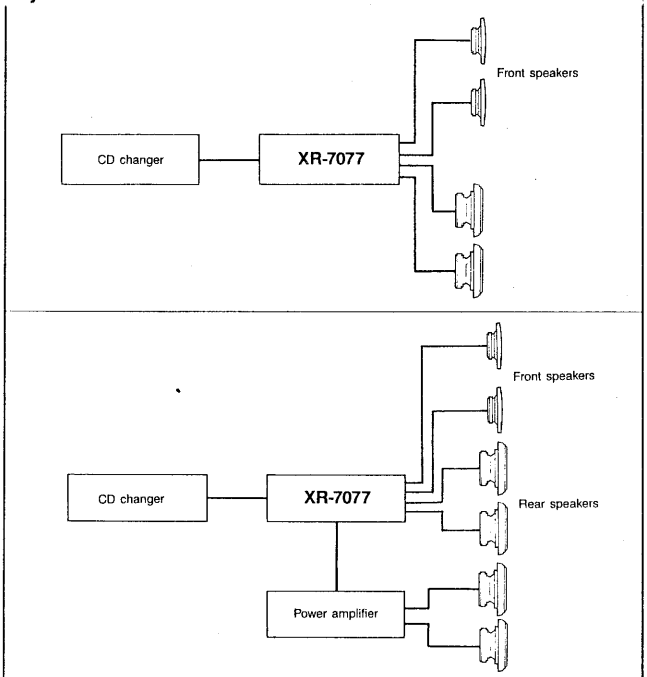

Speaker Connection

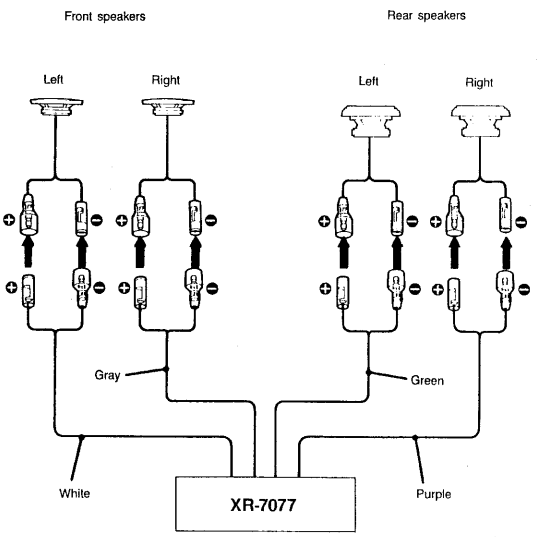

Notes on speaker connection

- Use speakers with an impedance of 3.2 to 8 ohms, and with adequate power handling capacities. Otherwise, the speakers may be damaged.
- Do not connect the terminals of the speaker system to the car chassis, and do not connect the terminals of the right speaker with those of the left speaker.
- Do not attempt to connect the speakers in parallel.

Connection Diagram

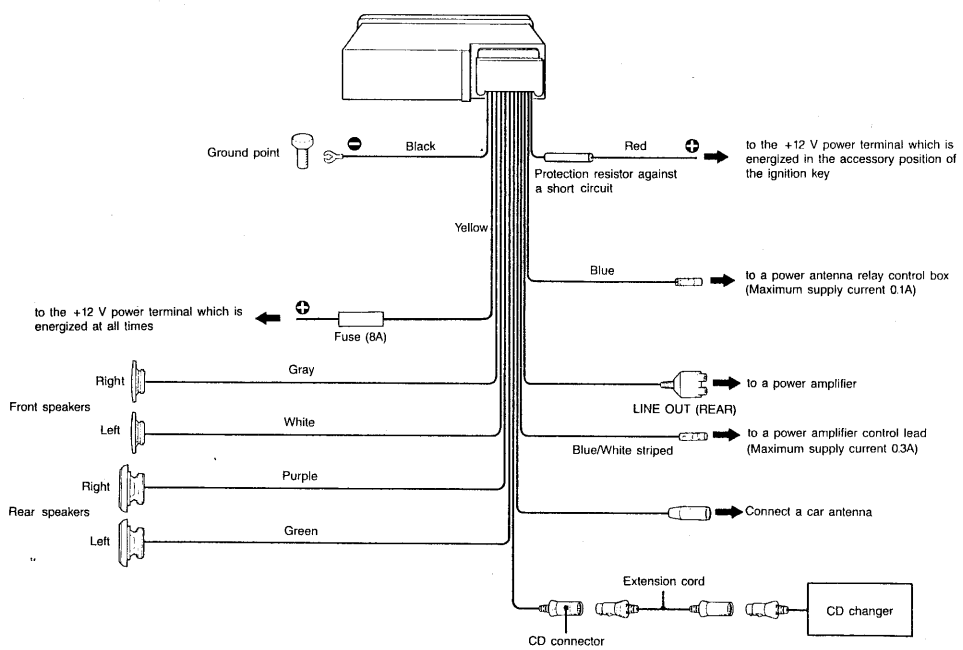

Notes on the control leads

- The power antenna control lead (blue) supplies +12 V DC when you turn on the tuner or the ATA* function is activated. A power antenna without relay box cannot be used with this unit. For details about the power antenna, refer to the power antenna instruction manual.
- When the power antenna control lead or the power amplifier control lead is contact with a metal part of the car, the unit cannot be turned on because the protection circuit is activated.

*Automatic Tuner Activation

After completing the connections and mounting the unit into the bracket, press the reset button of this unit. The reset button is effective only when the unit is mounted in the bracket.

Tape Playback

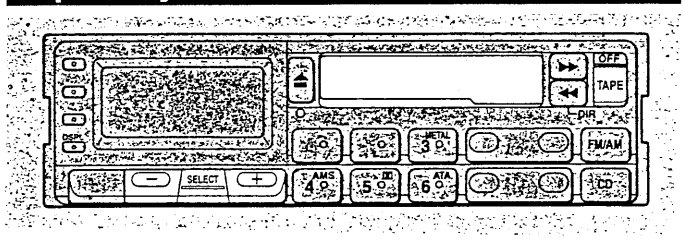

1

Insert a cassette to start playback.

TAPE

Press TAPE when a cassette is already inserted.

2 

Press to adjust the volume.

Side of the cassette being played back
This unit plays back both sides of the cassette repeatedly. The indicator in the display window shows which side of the cassette is being played back.

Indicator	Side
▶	The side facing upward
◁	The side facing downward

Other Operations

To listen to the other side of the cassette

(Press both simultaneously)

To wind the tape rapidly

Direction indicator	To advance	To rewind
▶	Depress ▶▶	Depress ◀◀
◁	Depress ◀◀	Depress ▶▶

To resume playback, press ▶▶ or ◀◀ lightly, which is not depressed.

To take out the cassette

To stop the tape and listen to the radio

FM/AM

To play back the tape again

TAPE

To stop the tape and turn off the unit

OFF

To stop the tape and listen to a disc

CD

Listening to the CrO_2 (TYPE II) or Metal (TYPE IV) Tapes

Press METAL 3.

MTL appears in the display window.
To listen to the normal (TYPE I) tapes, press it again.

Listening to Dolby NR-processed Tapes

Press 5 DD.

Press to activate the B-type Dolby NR system.
Select the same Dolby NR system used for the recorded cassette. The Dolby NR (Noise Reduction) system reduces tape hiss noise in low-level, high-frequency signals.

To Turn on the Radio Automatically While Fast-winding the Tape (ATA function)

Press ATA 6.

The tuner turns on automatically when you press the ◀◀ or ▶▶ during tape playback. When you resume the tape playback, the tuner turns off automatically.

To Locate the Beginning of a Selection (Automatic Music Sensor)

1 Press AMS 4.
2 Press ◀◀ or ▶▶, referring to the following table.

Indicator	Cassette side being played	Desired selection	
		Next selection	Current selection
▶	Side facing upwards	Depress ▶▶	Depress ◀◀
◁	Side facing downwards	Depress ◀◀	Depress ▶▶

The desired selection may not be located if ...
— there is a noise in the space between selections.
— the space is less than 4 seconds long.
— the ◀◀ or ▶▶ button is pressed immediately before or after the desired selection, or within the blank space.

Playback may begin in the middle of the selection when AMS is activated, as the followings are treated as blanks:
— a long pause in the selection
— a passage of low frequencies or very low volume
— gradual increase or decrease of volume, as in some classical music.

To display the frequency indication while the ATA is operating
Press DSPL. The display window shows the frequency which you tuned in last time. In this case, all the tuner operation buttons function in the same way as when you turn on the tuner (except for the FM/AM button).

Note
While locating the beginning of a selection by using the AMS function, the ATA function does not operate.

Automatic Tuning

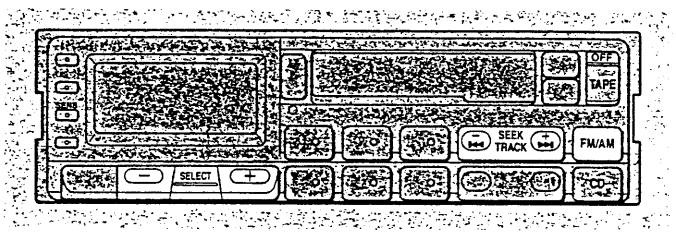

1 FM/AM

Press to select the desired band, FM I, FM II, FM III or AM.

The tuner turns on at the same time.

2 SEEK TRACK

Press to start scanning.

⏮ for lower frequencies

⏭ for higher frequencies

The scanning automatically stops when a station is tuned in.

Repeat this step until the desired station is tuned in.

3 SELECT

Press to adjust the volume.

FM has three bands (FM I, FM II, FM III). Three bands cover the same frequency range. To change the band, press FM/AM.

Manual Tuning

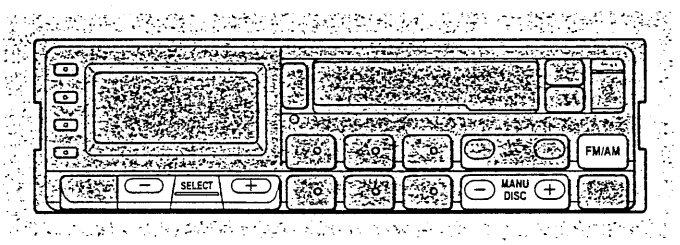

1 FM/AM

Press to select the desired band, FM I, FM II, FM III or AM.

The tuner turns on at the same time.

2 MANU DISC

Press to tune in the desired station.

− For lower frequencies

+ For higher frequencies

To change the frequency rapidly, keep the button pressed.

3 SELECT

Press to adjust the volume.

Warning
While driving, keep your eyes on the road and use the automatic tuning or the memory preset tuning.

Other Operations

To stop the radio and start tape playback

When no cassette is inserted	
When a cassette is already inserted	TAPE

To stop the radio and turn off the unit	OFF
To stop the radio and listen to a disc	CD

When there are too many stations and the scanning stops too frequently during automatic tuning

Press SENS.

Only the stations with relatively strong signals can be tuned in.



When the FM stereo program is too weak and noisy

Press SENS.

The noise will be reduced. The sound will be monaural instead.



Table below shows the modes of the SENS button

Button press	Mode	Display
First press	Local seek mode	LCL
Second press	Monaural mode	MONO
Third press	Canceled	—

When the FM stereo program of sufficient signal strength is tuned in



The program is automatically received in stereo.

Memory Preset Tuning

You can memorize a total of 24 stations (6 stations for each band), one on each preset number.

Memorizing the Stations Automatically (Automatic Memory Function)

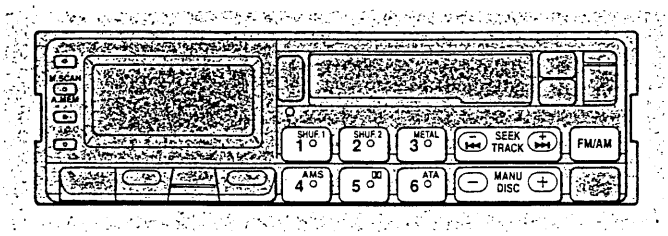

1	FM/AM	**Press to select the desired band, FMI, FMII, FMIII or AM.** **The tuner turns on at the same time.**
2	M.SCAN A.MEM	**Press for more than two seconds.** The unit starts scanning the selected band and memorizes the tuned stations on the preset number button 1 through 6 automatically.

In what way are stations scanned and memorized?
The unit scans the selected band twice. The scanning starts from the displayed frequency. During first cycle, the unit scans stations with considerably strong signals. During the next cycle, the unit scans all stations that can be received, including weak ones. And for memorizing, if any preset number is indicated in the display window, memorizing starts from this preset number. When you choose FMII and the preset number 3 is displayed in the window, for example, memorizing starts from the preset number 3 on FMII, and stops at the preset number 6 on FMIII.

To Receive the Preset Station

1	FM/AM	**Press to select the desired band.**
2	SHUF.1 1 ~ ATA 6	**Press lightly to receive the desired station.**

Surveying What is Being Broadcast on the Preset Stations

Press M.SCAN / A.MEM lightly.

Each memorized station will be scanned for five seconds in order. (When the broadcast of the memorized station is too weak, it cannot be received.)

Memorizing Only the Desired Stations Manually

Example: To memorize on the preset number 1

1	FM/AM	**Press to select the desired band.**
2	SEEK TRACK or MANU DISC	**Press to tune in the desired station.**
3	SHUF.1 1	**Press for more than two seconds.** The number of the pressed preset number button will be displayed. MEM indicator appears to show that the station has been memorized. (MEM indicator will disappear in a few seconds.)



Repeat these steps for each preset button.

Important
Every preset number button has only one memory for a band. The previously memorized station will be erased when you enter a new station of the same band on the same preset number button.

Disc Playing (When the optional Sony CD changer is connected)

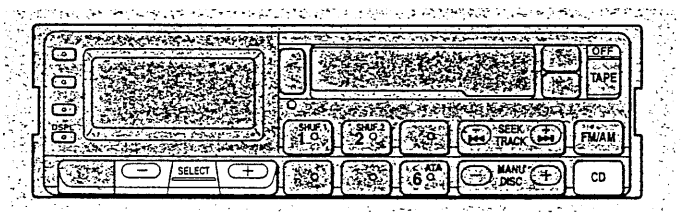

Before operating, insert a disc magazine with discs into the CD changer.

1	CD	Press to start the disc play.
2	SELECT	Press to adjust the volume.

Other operations

To listen to another disc in the disc magazine — MANU DISC

If you press it for more than 0.5 second, it operates as the manual search.

To stop disc play and start tape playback

When no cassette is inserted

When a cassette is already inserted — TAPE

To stop disc play and ...

To listen to the radio — FM/AM

To turn off the unit — OFF

To display the elapsed time during the disc play
Press DSPL. The elapsed time of the selection is indicated in the display window. To cancel the elapsed time indication, press it again.

Various Plays

To play the selection on the disc in random order (Shuffle play 1)

Press SHUF.1 1. All selections on the disc being played will be played in random order. After playing all selections on the disc, the unit goes to the next disc.

To play the selection on all discs in random order (Shuffle play 2)

Press SHUF.2 2. All selections on all discs in the disc magazine will be played in random order.

To turn on the radio automatically while changing discs (ATA function)

Press ATA 6. The radio is heard automatically while changing discs. Press DSPL to display the frequency indication while the ATA is operating. In this case, all the tuner operation buttons function in the same way as when you turn on the tuner (except for FM/AM button).

To resume normal playback
Press each button again.

Locating the Beginning of a Desired Selection during Disc Playing

To locate the beginning of the selection being played	Press SEEK TRACK
To locate a previous selection	Keep SEEK TRACK pressed. Release the button at the desired selection.
To locate the next selection	Press SEEK TRACK
To locate a selection ahead	Keep SEEK TRACK pressed. Release the button at the desired selection.

When the first selection or the last selection of the disc is located, the play begins from the selection.

To search for a particular point in a selection (manual search)

To go ahead at high speed	Keep MANU DISC pressed. Release the button at the desired point.
To go back at high speed	Keep MANU DISC pressed. Release the button at the desired point.

The elapsed time of the selection is displayed during the manual search.

SECTION 2
DISASSEMBLY

Note: Follow the disassembly procedure in the numerical order given.

UPPER COVER

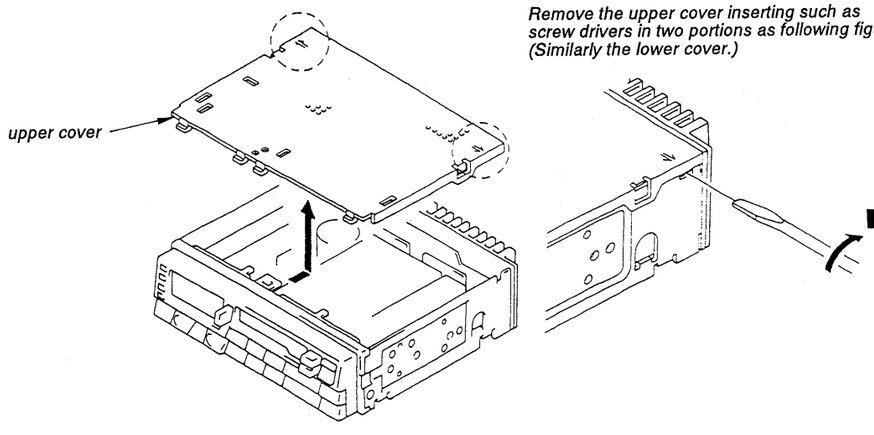

Remove the upper cover inserting such as screw drivers in two portions as following figure. (Similarly the lower cover.)

POWER BLOCK

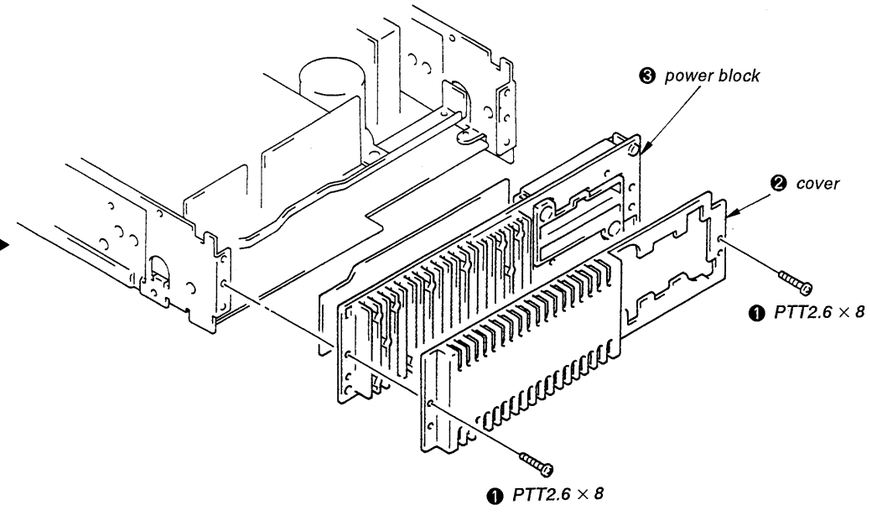

HANDLE

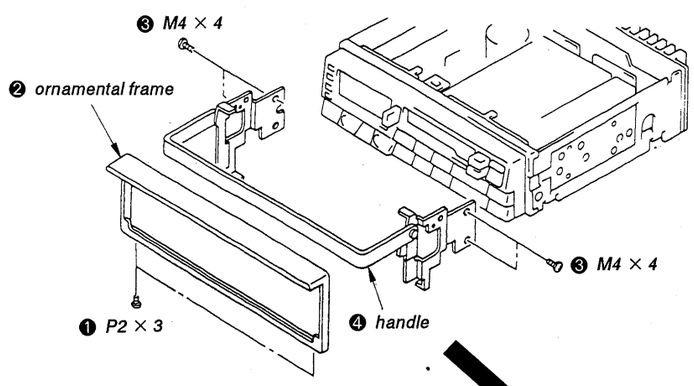

FRONT PANEL ASSEMBLY

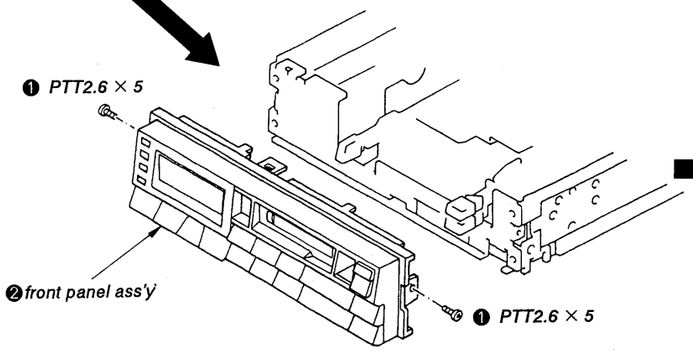

MD BLOCK

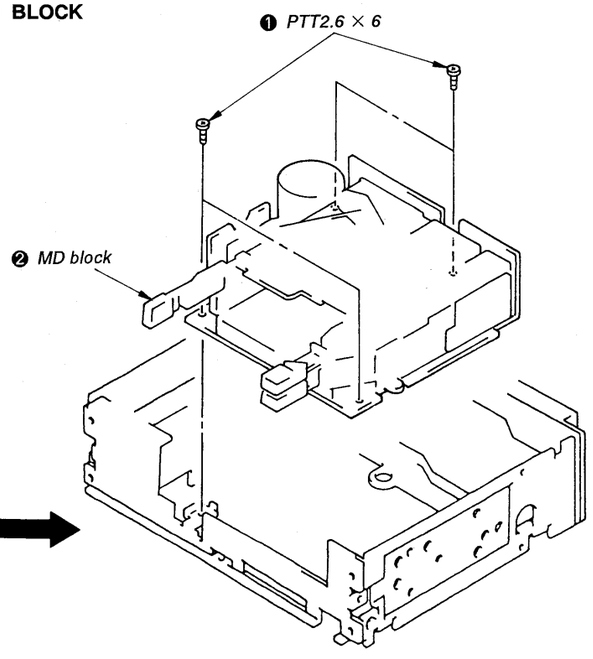

SECTION 3
ADJUSTMENTS

3-1. MECHANICAL ADJUSTMENT

PRECAUTION

1. Wipe the following components with an absorbent cotton cloth moistened with alcohol before adjustment:
   PB head — Pinch roller
   Idler — Rubber belt
   Capstan
2. Demagnetize the PB head using a head demagnetizer.
3. Be careful not to use a magnetized screwdriver.
4. After adjustment is completed, lock the adjustment parts using screws.
5. Unless otherwise specified, make adjustments at the specified voltage (14.4 V).

Torque Measurement

Measure the torque at a supply voltage of 14.4 V DC.

	Torque meter	Meter reading
FWD	CQ-102C	25 to 55 g·cm (0.35 to 0.77 oz·inch)
FF, REW	CQ-201B	55 to 150 g·cm (0.77 to 2.1 oz·inch)
Back tension	CQ-102C	1.5 to 4 g·cm or less (0.02 to 0.05 oz·inch or less)

Adjustment Location:

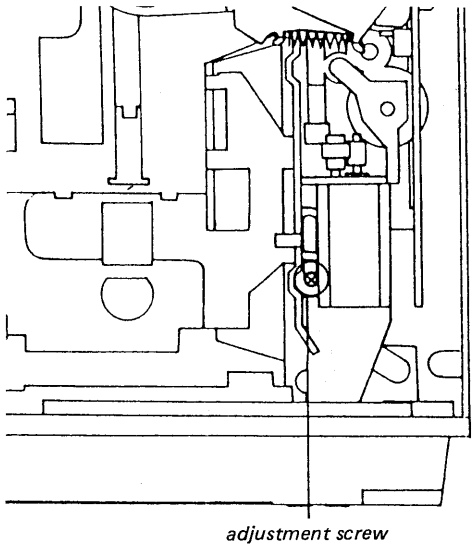

3-2. ELECTRICAL ADJUSTMENTS DECK SECTION

PB Head Vertical Adjustment

Proceudre:

1. Put the set into the FWD PB mode.

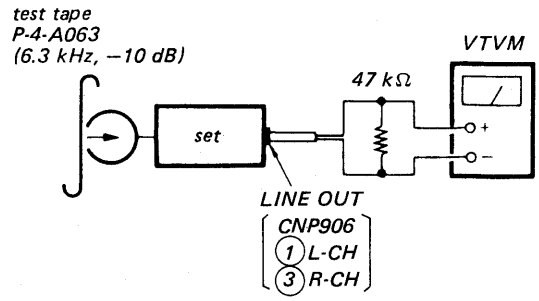

2. Turn the screw and check the output peak value. Adjust the screw so that peak value in channels L and R coincides within 2 dB.

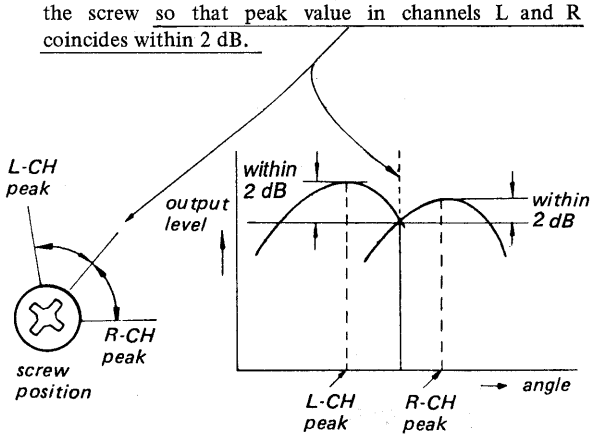

3. Check the phase in the PB mode.

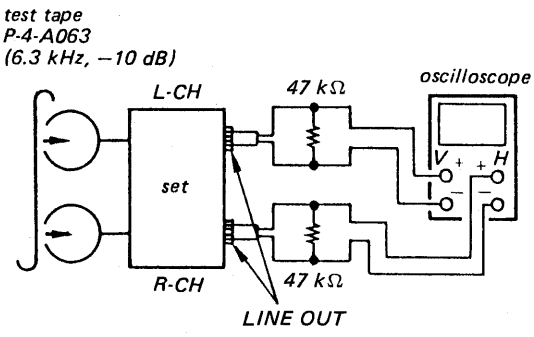

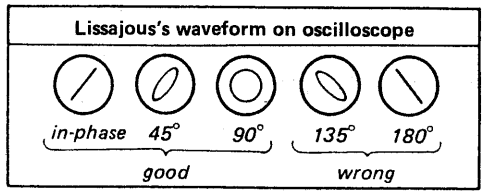

4. Repeat the above adjustment for the PB REV mode.

Capstan Motor Tape Speed Adjustment

Procedure:

1. Put the set into the FWD PB mode.

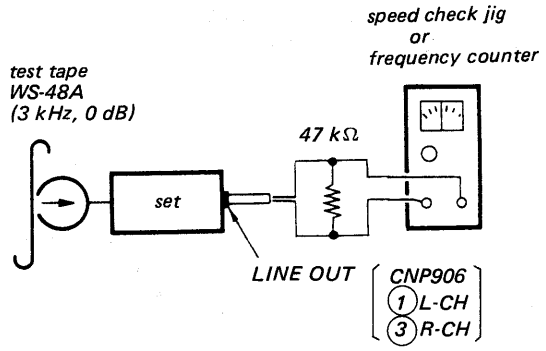

Specification: Constant speed

Speed check jig	Frequency counter
−1.5 to +2.5%	2,955 to 3,075 Hz

Adjust so that the frequency difference between the FWD and REV modes is within 1.5% (45 dB).

Adjustment Location: RV01

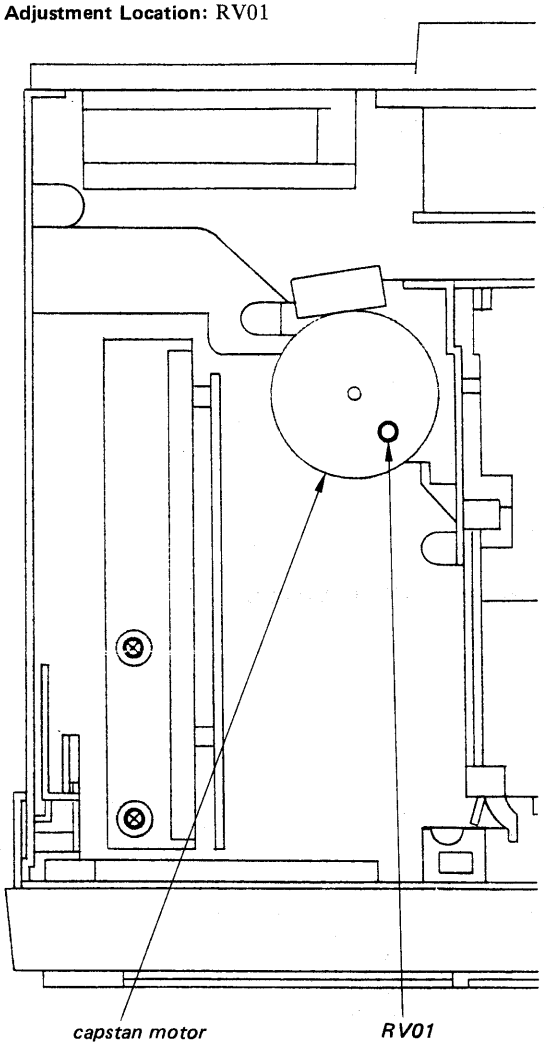

DOLBY NR Level Adjustment

Setting:

DOLBY NR switch: OFF
METAL switch: OFF

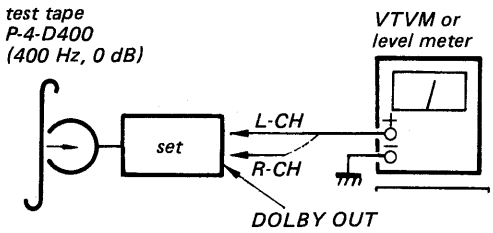

Procedure:

1. Put the set into the FWD PB mode.
2. Adjust RV101 (L-CH) so that VTVM reading is −6 ±1.5 dB.
3. Put the set into the REV PB mode.
4. Adjust RV201 (L-CH) so that VTVM reading is −6 ±1.5 dB.
   (−6 ±1.5 dB: approx. 0.35 to 0.54 V)

Adjustment Location: dolby board

[MAIN BOARD] (Conductor Side)

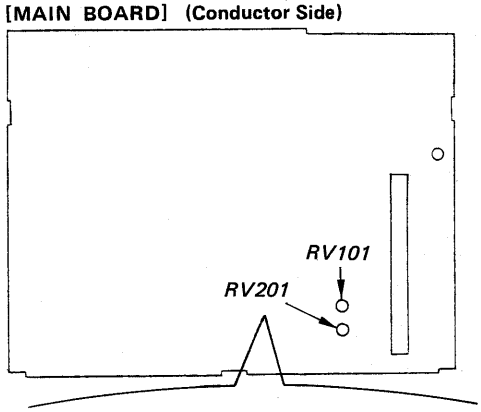

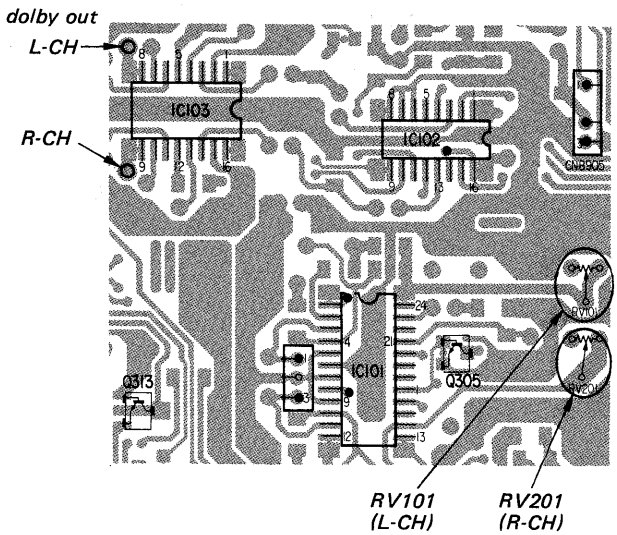

TUNER SECTION

Cautions during repair
When the front end is defective, replace it by a new one because its internal block is difficult to repair.

FM Auto Scan/Stop Level Adjustment

Setting:
Band switch: FM
MONO switch: ON
Frequency: 97.9 MHz

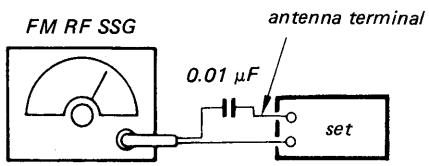

Carrier frequency: 97.9 MHz
Output level: 25 dB(18 μV)
Mode: mono, unmodulated

Procedure:
1. Tune in 97.9 MHz.
2. Adjust RV02 so that the VOM reading changes from low to high (5 V reference voltage).
3. When the FM RF SSG's output level is 25 ±5 dBμV check that the auto scan is stopped.

AM Auto Scan/Stop Level Adjustment

Note: This adjustment should be made after FM auto scan stop level adjustment is completed.

Setting:
Band switch: AM
Frequency: 1,000 kHz

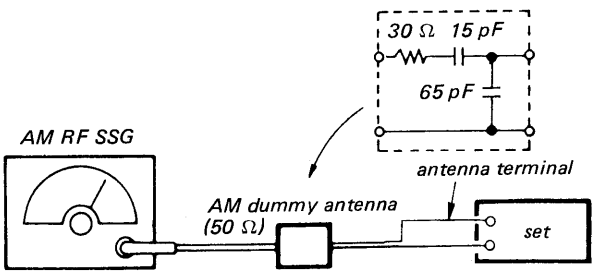

1,000 kHz
30 dB (31.8 μV)

Procedure:
1. Turn in 1,000 kHz.
2. Adjust RV03 so that the VOM reading changes from low to high (5.6 V reference voltage).
3. When the AM RF SSG's output level is 30 ±5 dBμV, check that the auto scan is stopped.

[MAIN BOARD] (Conductor Side)

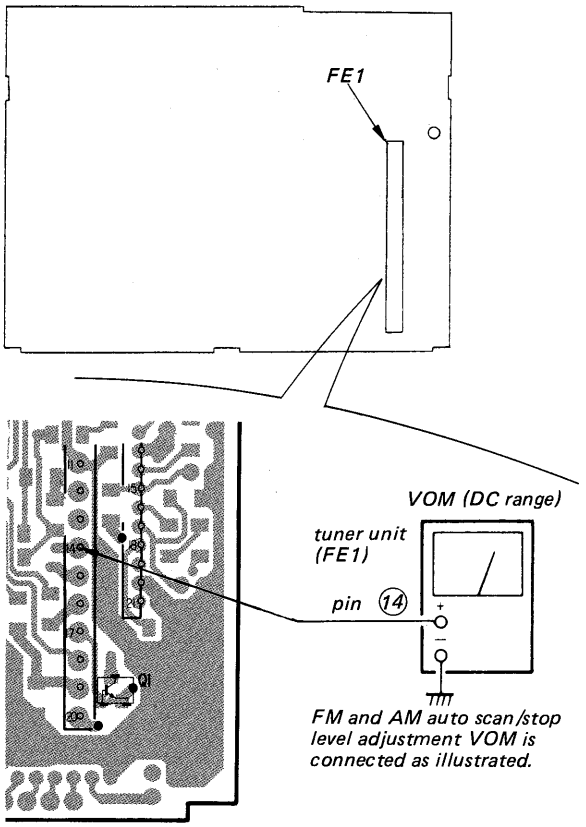

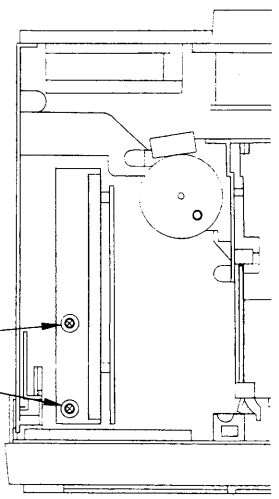

FM Stereo Separation Adjustment

Setting:

Band switch: FM
Frequency: 97.9 MHz

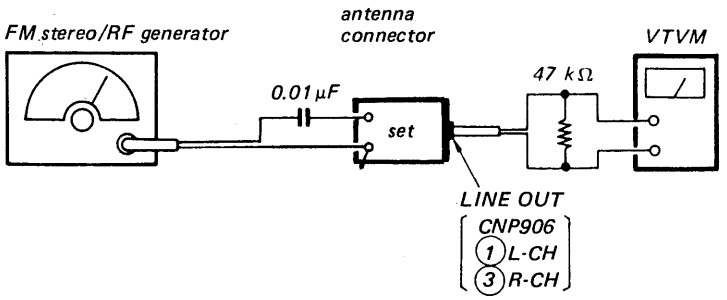

Carrier frequency: *97.9 MHz*
Output level: *70 dB (3.15 mV)*
Modulation: *main; 1 kHz 33.75 kHz deviation*
sub; 1 kHz, 33.75 kHz deviation
19 kHz pilot; 7.5 kHz deviation

Procedure:

1. Adjust RV1 for a best stereo separation at a LINE OUT level of approximately −10 dB.
   More than 25 dB is good.

FM stereo signal generator output channel	VTVM connection	VTVM reading (dB)
L-CH	L-CH	(A)
R-CH	L-CH	(B) Adjust RV1 for minimum reading.
R-CH	R-CH	(C)
L-CH	R-CH	(D) Adjust RV1 for minimum reading.

   L-CH Stereo separation: (A) − (B)
   R-CH Stereo separation: (C) − (D)
   The separations of both channels shoul be equal.
2. If the result is not enough, make a solder bridge at (X) position and step back to proceduer 1.
3. If the result is still not good even with the bridge (X), make one at (Y) position in place of (X) and step to procedure 1. again.

Adjustment Location:

[MAIN BOARD] (Conductor Side)

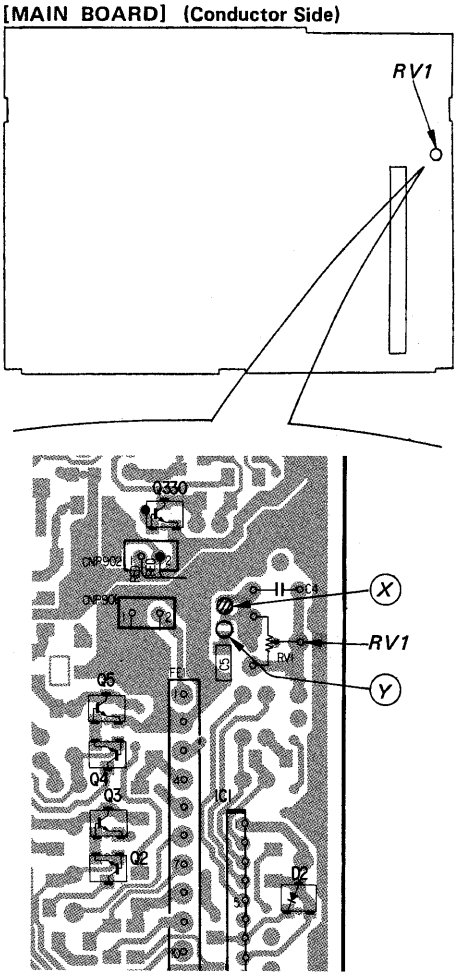

SECTION 4
DIAGRAMS

• IC301 μPD75116GF-625-3BE (MICRO COMPUTER)

The μPD75116GF-625-3BE function are described below.

• Description

Pin No.	Name	I/O	Description
1	VOL CLK	O	Clock output for electoronic volume. DSP CLOCK — Control signal outputs for electronic volume and DSP (Digital Signal Processor).
2	VOL DATA	O	DATA output for Electronic volume and DSP.
3	MUTE	O	AUDIO MUTE output. High: MUTE ON.
4	(PW AMP MUTE)	(O)	POWER AMP MUTE output. High: MUTE ON. (Not used.)
5	ILL	O	ILLUMI output. High: ILLUMI ON.
6	POWER	O	SYSTEM POWER output. POWER ON/OFF for the whole system of the set, electronic volume, PLL IC, and LCD driver.
7	$\overline{\text{RESET}}$	–	RESET signal
8	X2	–	4.19 MHz
9	X1	–	
10	ACC ON	I	ACC input
11	HANDLE ON	I	HANDLE SW input.
12	$\overline{\text{STEREO}}$/ $\overline{\text{MONO}}$	I/O	STEREO input: When STEREO is selected on FM, "ST" is indicated at low input. MONAURAL output: When FORCED MONO is selected on FM, low output.
13	$\overline{\text{PLL ST IN}}$	I	PLL automatic search stop signal input.
14	PLL DATA	O	PLL DATA output. — Serial data output for PLL cantrol.
15	PLL CLK	O	PLL CLOCK output
16	PLL CE	O	PLL CE output
17	PLL STRQ	O	PLL If figures request signal output. High: Request on.
18	LOCAL	O	LOCAL/DX switching on AM. High: LOCAL output.
19	ANT	O	ANTENNA output. When TUNER, SDK, ATA, are on, high output.
20	(DK OUT)	(O)	SDK DK station receiving output. When DK signal is in at SDK on, high output. (Not used)
21	KEY SEL	O	KEY INPUT SELECT signal. Initial diode switch is in: High output. Key scan: Low output.
22	DOLBY B	O	DOLBY B output. DOLBY ON/OFF: ON at high. Signal is out only when the audio signal is TAPE on MD-POWER is on. Low is out on the others.
23	PL	O	Signal output to change FF-REW position to PLAY position on TAPE AMS detection or so on.

Pin No.	Name	I/O	Description
24	METAL	O	METAL output. METAL ON at high. Signal is out only when MD-POWER is on. Low on MD-POWER OFF.
25	MD POWER	O	MD POWER output. For MD POWER control. High on tape playback state. Low on stop state.
26	Vss	–	GND
27	$\overline{N}$/R	I	Tape Normal/Reverse detection input. Low on normal side.
28	FF•REW	I	High signal is in. When tape is FF/REW position.
29	AMS	I	Tape signal (tune) presence detection input. When there is a signal (a tune), it is high.
30	PACK IN	I	When the cassette is packed in, high signal is in.
31	SDL	I	SD signal during tuner receiving. Used as SDL signal during BEST TUNING MEMORY. When there is a station, high signal is in.
32	BK	I	On SDK ON, counts BK and indicatets area. Connects to ground when it isn't ARI system.
33	SK	I	When receiving the station has high SK, indicates "SK".
34	DK	I	When receiving the station broadcasting ARI, high signal is in.
35	CD CHECK $\overline{REM•IN}$	I	CD CHECK (use this port both as $\overline{REM-IN}$). High signal is in when CD is connected.
36	CD MUTE $\overline{AUX-MUTE}$	I	CD MUTE (use this port both as $\overline{AUX-MUTE}$). CD MUTE input. MUTE ON at high.
37	DISP SEL REM-OUT	O	DISP SEL (use this port both as REM-OUT). CD changer control signal output.
38	CD DATA OUT	O	Serial data output to CD changer.
39	CD CLK OUT	O	Serial clock output to CD changer.
40	BEEP	O	Buzzer output. (Approx. 2 kHz and 700 Hz, two kinds of signal output.) On Test Mode, 2,048 Hz signal output.
41	CD DATA IN	I	Serial data input from CD changer.
42	–	–	Not used.
43	CD CLK IN	I	Serial clock input from CD changer.
44	BACK UP ON	I	BACK UP input.

<table>
<tr><th>Pin No.</th><th>Name</th><th>I/O</th><th>Description</th></tr>
<tr><td>45
|
48</td><td>$\overline{KIN3}$
|
$\overline{KIN0}$</td><td>I/O</td><td>Key matrix input. Initial diode switch output.
Activates at low.</td></tr>
<tr><td>49
|
52</td><td>$\overline{KOUT5}$
|
$\overline{KOUT2}$</td><td>I/O</td><td>Key matrix output. Initial diode switch input.
Activates at low.</td></tr>
<tr><td>53, 54</td><td>$\overline{KOUT1, 0}$</td><td>O</td><td>Key matrix output.
Activates at low.</td></tr>
<tr><td>55, 56</td><td>SIG 2, 1</td><td>O</td><td>Audio signal select output.
<table>
<tr><th colspan="2">SOURCE</th><th>SIG2</th><th>SIG1</th></tr>
<tr><td rowspan="2">TAPE</td><td>N</td><td>L</td><td>L</td></tr>
<tr><td>R</td><td>L</td><td>H</td></tr>
<tr><td colspan="2">TUNER</td><td>H</td><td>L</td></tr>
<tr><td colspan="2">CD/AUX</td><td>H</td><td>H</td></tr>
</table></td></tr>
<tr><td>57</td><td>NC</td><td>–</td><td>(Short-circuit to V_{DD})</td></tr>
<tr><td>58</td><td>V_{DD}</td><td>–</td><td>Power source.</td></tr>
<tr><td>59</td><td>COLOR</td><td>O</td><td>Illumination amber/green select.
High: Green
Low: Amber</td></tr>
<tr><td>60</td><td>LCD DATA</td><td>O</td><td>LCD data output. LCD driver control output.</td></tr>
<tr><td>61</td><td>LCD CLK</td><td>O</td><td>LCD clock output.</td></tr>
<tr><td>62</td><td>LCD CE</td><td>O</td><td>LCD CE output.</td></tr>
<tr><td>63</td><td>DSP AO</td><td>O</td><td>DSP (Digital Signal Processor) control signal output.</td></tr>
<tr><td>64</td><td>VOL CE</td><td>O</td><td>Electronic volume control signal output.</td></tr>
</table>

• IC BLOCK DIAGRAMS

IC1 STK-3400

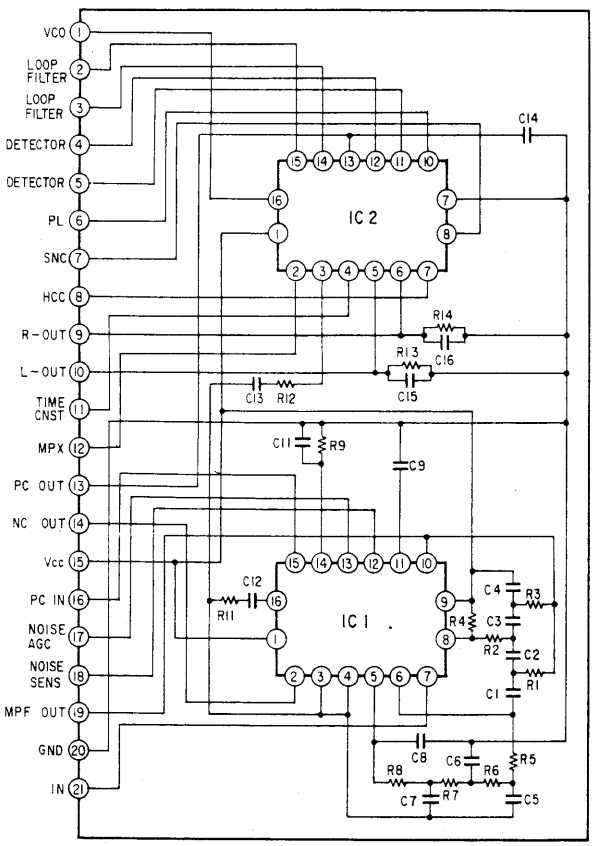

IC2 LM7000

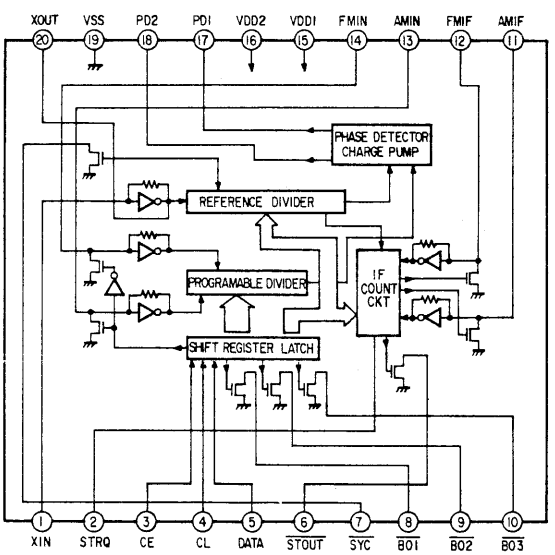

IC101 M51524L, P, FP

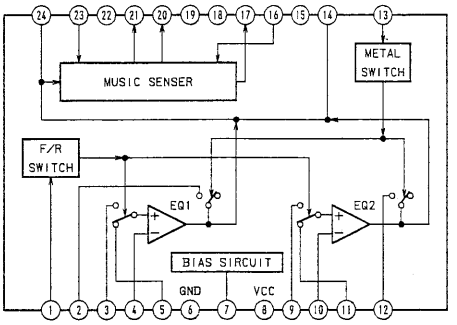

IC103 CXA1102P/M

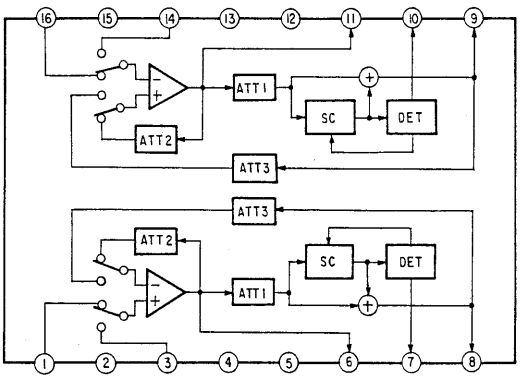

IC111 M5280FP

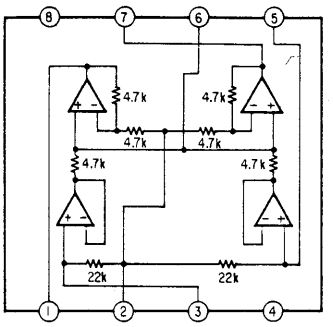

IC501, 601 TA8205HA

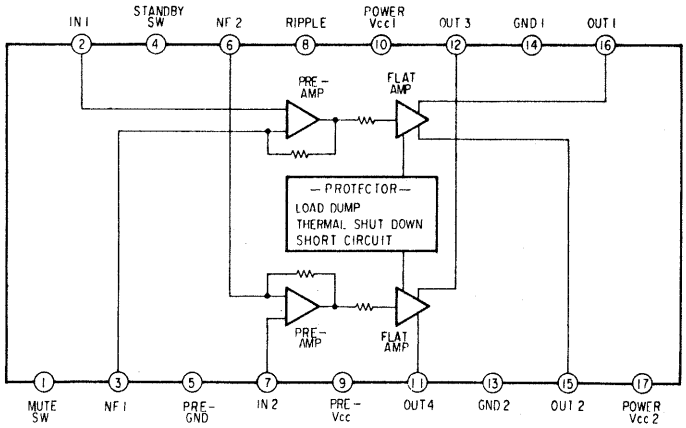

4-1. TUNER SECTION SCHEMATIC DIAGRAM

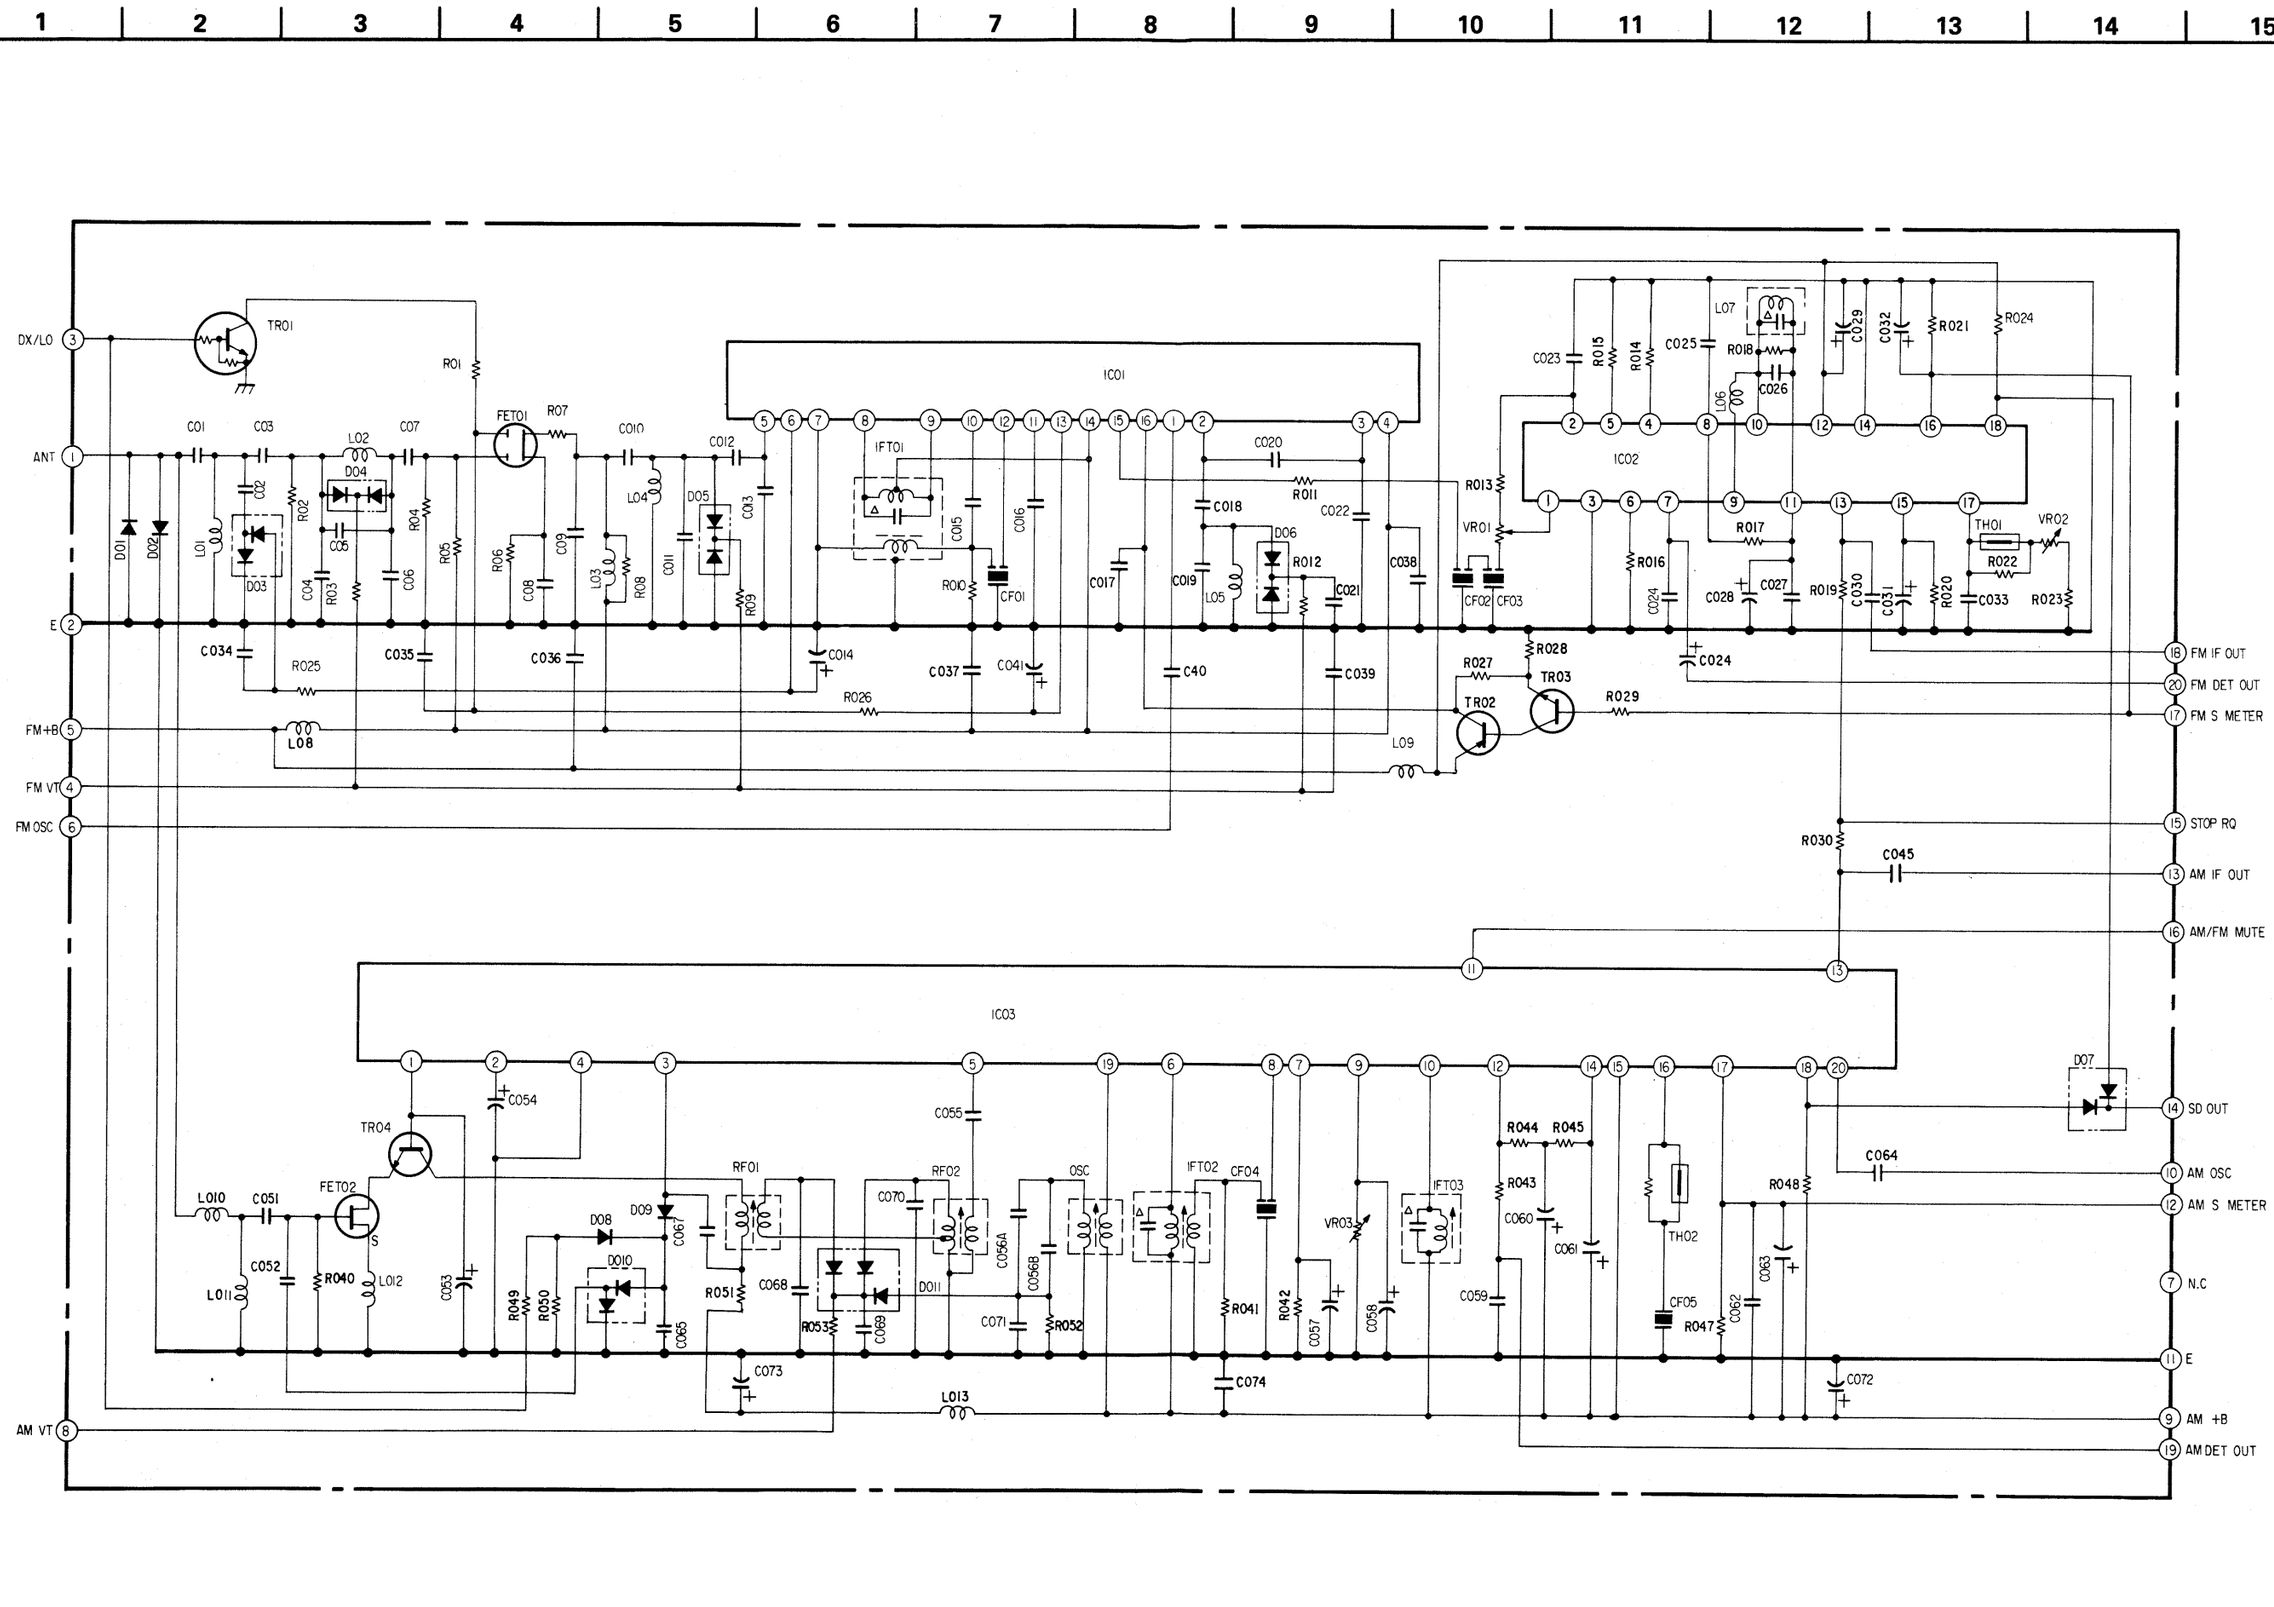

LC7582

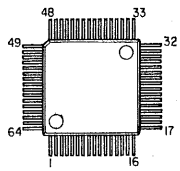

CL-55Y/CD



DSA3A4



NMX3S920



MARKING SIDE VIEW

RLS-4148



TA8205AH

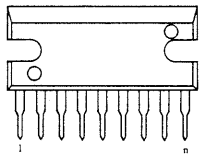

μPD75116GF-625-3BE

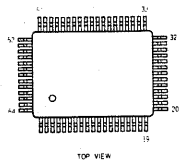

2SD1802FAS

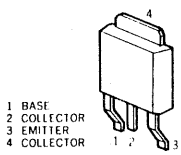

1SS119
RD11ES-B2
RD3.9ES-B2
RD4.7ES-B1
RD4.7ES-B2
RD5.1ES-B1
RD5.6ES-B2
RD6.2EL2
RD6.8ES-B1
RD9.1ES-B2



4-2. MAIN SECTION PRINTED WIRING BOARDS

• See page 24 for Semiconductor Lead Layouts.

Note:

- ○——— : parts extracted from the component side.
- ——— : parts extracted from the conductor side.
- ■ : parts mounted on the conductor side.
- ● : Through hole.
- ▒▒▒ : Pattern on the side which is seen.
- ▒▒▒ : Pattern of the rear side.

• Semiconductor Location

Ref. No.	Location	Ref. No.	Location	Ref. No.	Location
D1	J-1	D701	A-3	Q1	J-18
D2	H-18	D702	A-2	Q2	H-17
D3	G-16	D703	A-2	Q3	H-17
D4	K-17	D704	B-4	Q4	H-17
D5	G-17	D705	B-5	Q5	G-17
D101	G-11	D706	B-5	Q6	F-3
D201	G-13	D707	A-8	Q7	G-16
D301	E-11	D708	A-7	Q8	G-3
D302	F-17	D709	A-6	Q9	G-17
D303	H-16	D710	A-9	Q10	G-16
D304	H-5	D711	A-4	Q11	J-16
D305	K-11	D712	B-3	Q102	E-6
D306	K-11	D713	A-5	Q103	E-5
D307	K-11	D714	A-2	Q202	E-6
D308	K-11	D715	A-5	Q203	F-5
D309	K-11	D716	B-2	Q301	F-17
D310	K-12	D717	B-3	Q302	F-17
D311	K-12	D718	B-4	Q303	E-10
D312	J-13	D719	B-4	Q304	E-10
D313	J-13	D720	B-1	Q305	I-16
D314	J-13	D721	B-1	Q307	H-15
D315	J-14	D722	C-1	Q308	K-14
D325	J-13	D723	A-1	Q309	G-4
D326	J-13	D724	B-1	Q310	G-5
D327	J-13	D725	C-1	Q311	F-15
D328	J-12	D851	I-21	Q312	G-5
D329	J-12			Q313	J-14
D330	J-12	IC1	H-18	Q314	F-15
D331	J-12	IC2	J-17	Q315	E-11
D333	G-15	IC101	I-15	Q316	E-11
D334	G-14	IC102	H-16	Q319	F-3
D335	G-15	IC103	H-14	Q323	G-14
D336	F-4	IC104	G-12	Q324	G-14
D337	I-14	IC105	G-7	Q325	F-16
D338	F-15	IC106	G-7	Q326	F-16
D339	G-14	IC107	G-7	Q327	F-16
D340	E-14	IC108	G-7	Q328	F-18
D341	F-16	IC109	F-12	Q329	F-18
D342	E-17	IC110	F-14	Q330	F-18
D344	F-17	IC111	G-16	Q332	J-4
D345	J-14	IC301	I-11	Q702	B-11
D346	G-11	IC302	G-11		
D347	G-10	IC501	F-23		
D348	H-11	IC601	F-21		
D591	E-21	IC701	B-12		

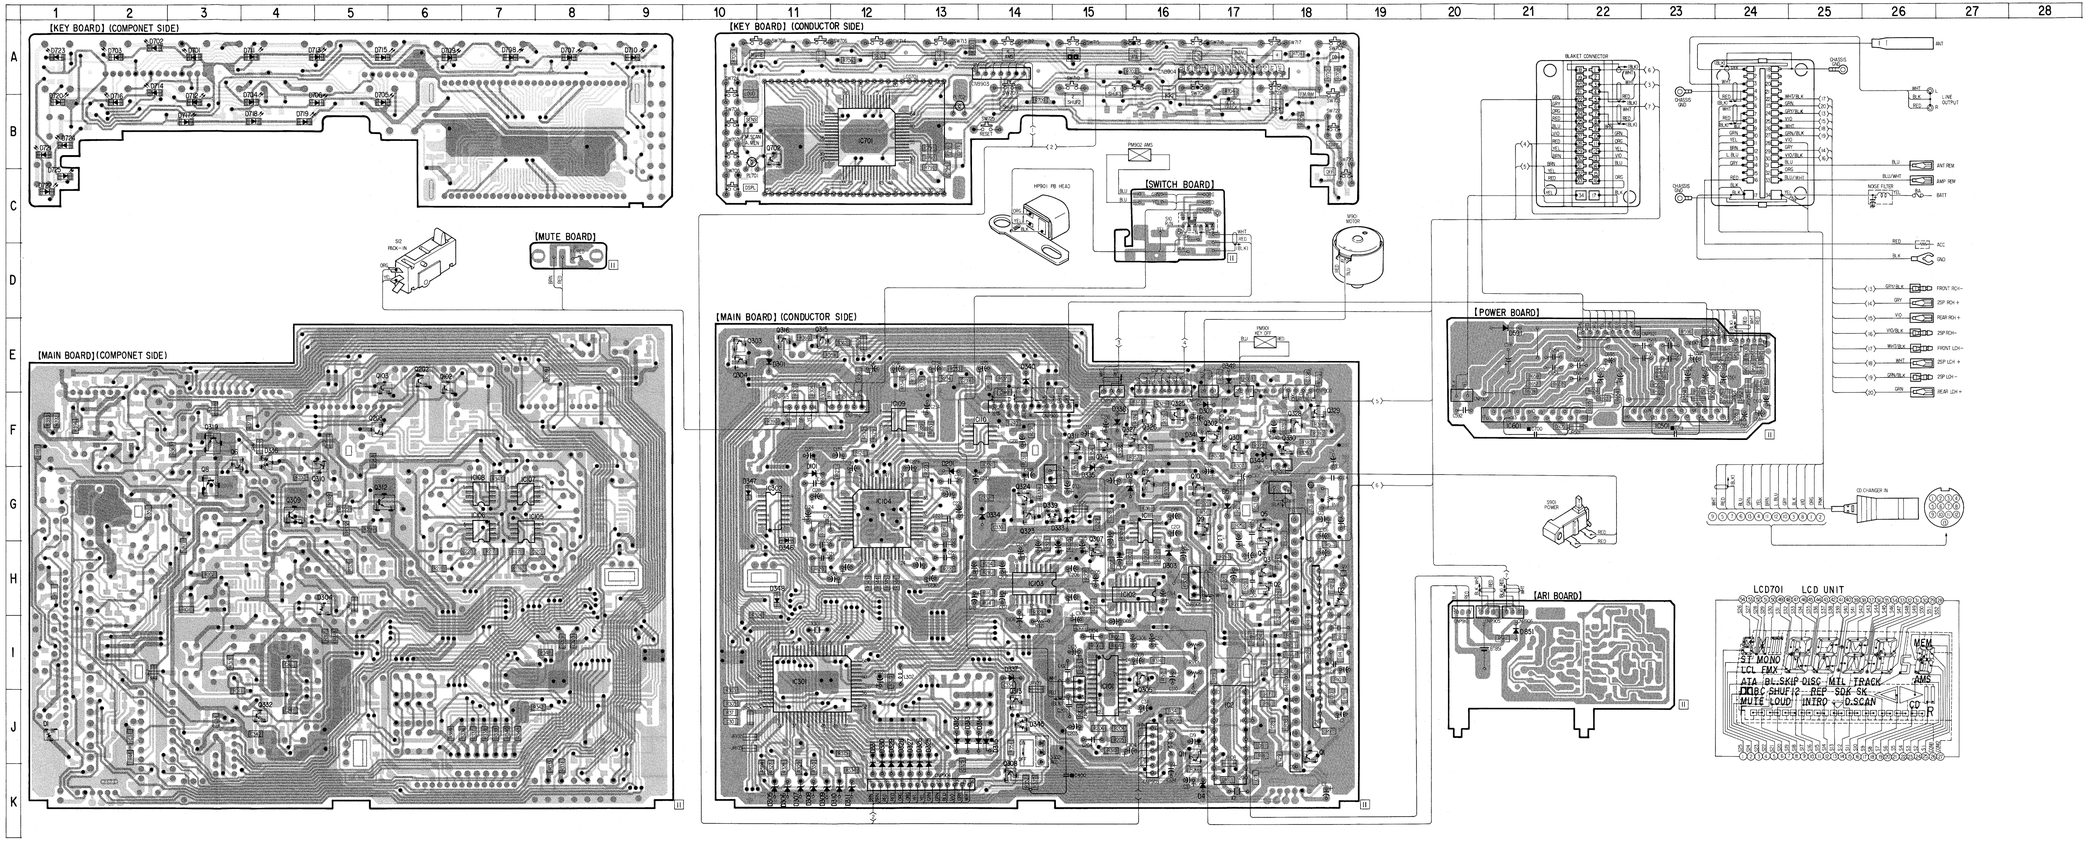

4-3. MAIN SECTION SCHEMATIC DIAGRAM

• See page 22 and 23 for Tuner Section Schematic Diagram. • See page 20 and 21 for IC Block Diagrams.

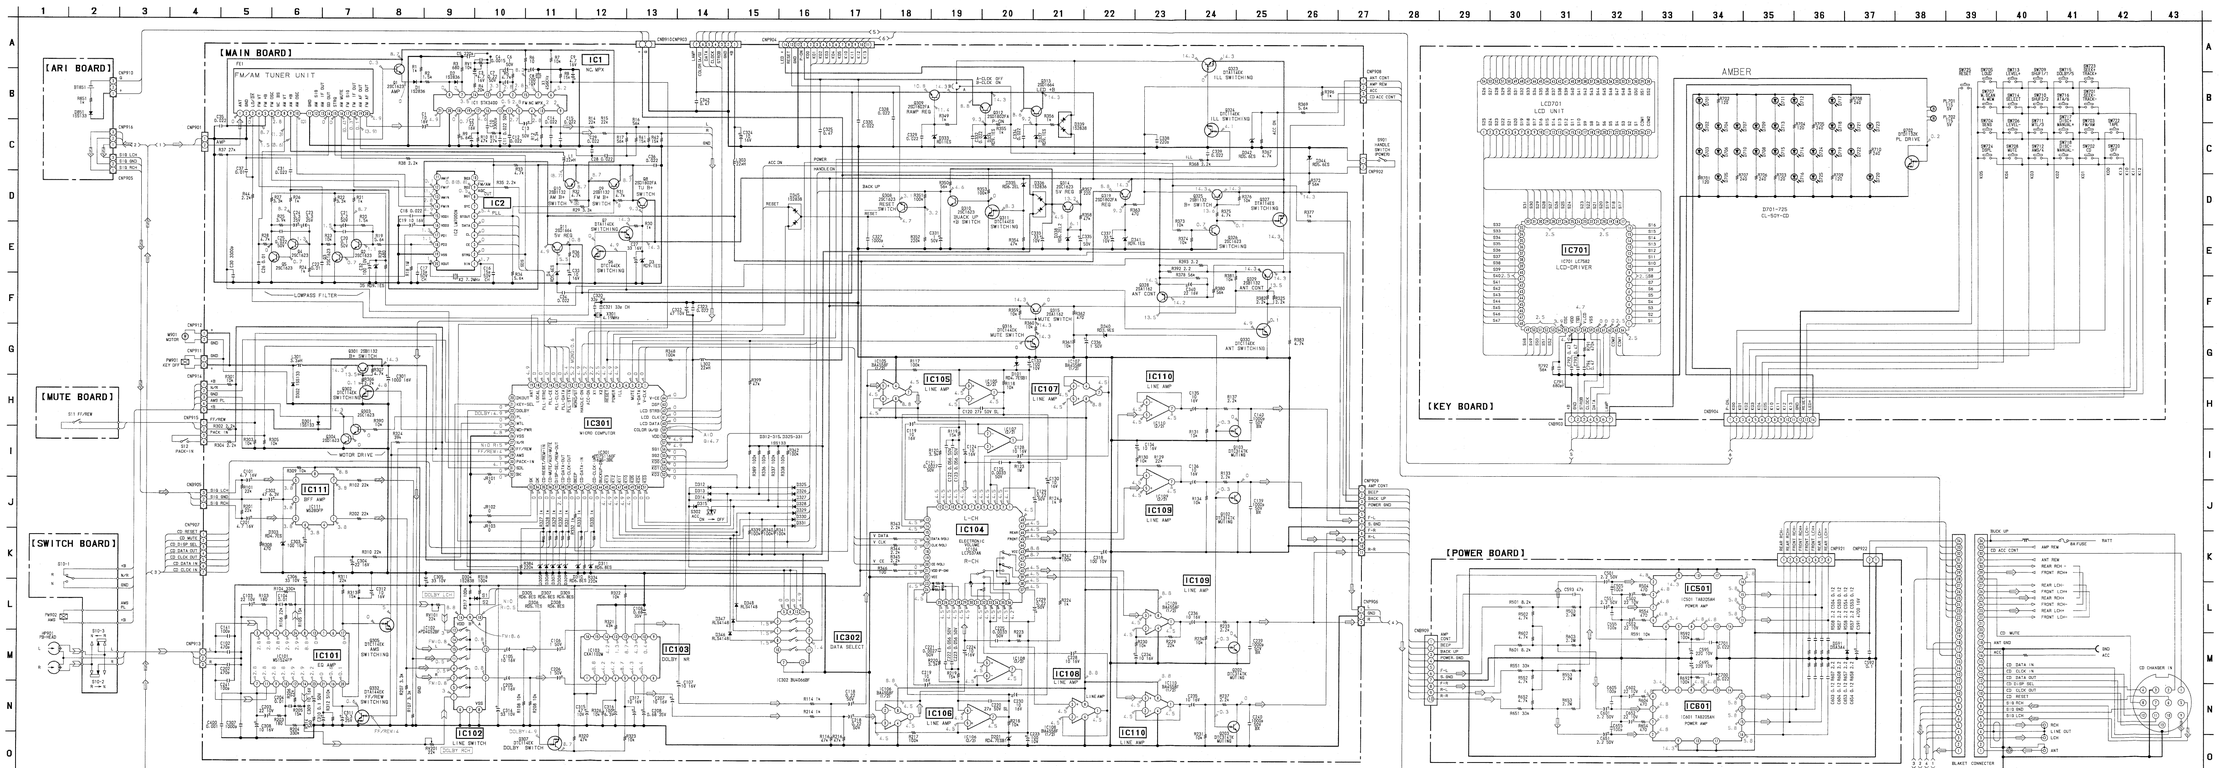

Note:

- All capacitors are in μF unless otherwise noted. pF: μμF
  50 WV or less are not indicated except for electrolytics and tantalums.
- All resistors are in Ω and ¼ W or less unless otherwise specified.
- % : indicates tolerance.
- △ : internal component.
- ▲ : nonflammable resistor.
- : B + Line.
- : adjustment for repair.
- Power voltage is dc 14.4 V and fed with regulated dc power supply from battery terminal.
- Voltages and waveforms are dc with respect to ground under no-signal (detuned) conditions.
  no mark :FM or PLAY
  ( ) :AM
- Voltages are taken with a VOM (10 MΩ/V).
  Voltage variations may be noted due to normal production tolerances.
- Signal path.
  : FM
  : PB
  : CD

SECTION 5
EXPLODED VIEWS

NOTE:

- The mechanical parts with no reference number in the exploded views are not supplied.
- The construction parts of an assembled part are indicated with a collation number in the remark column.
- Items marked "★" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- Due to standardization, parts with part number suffix -XX and -X may be different from the parts specified in the components used on the set.
- Color Indication of Appearance Parts Example:
  (RED) . . . KNOB, BALANCE (WHITE)
  ↑ ↑
  Cabinet's Color Parts Color

The components identified by mark ⚠ or dotted line with mark ⚠ are critical for safety.
Replace only with part number specified.

(1) FRONT PANEL SECTION

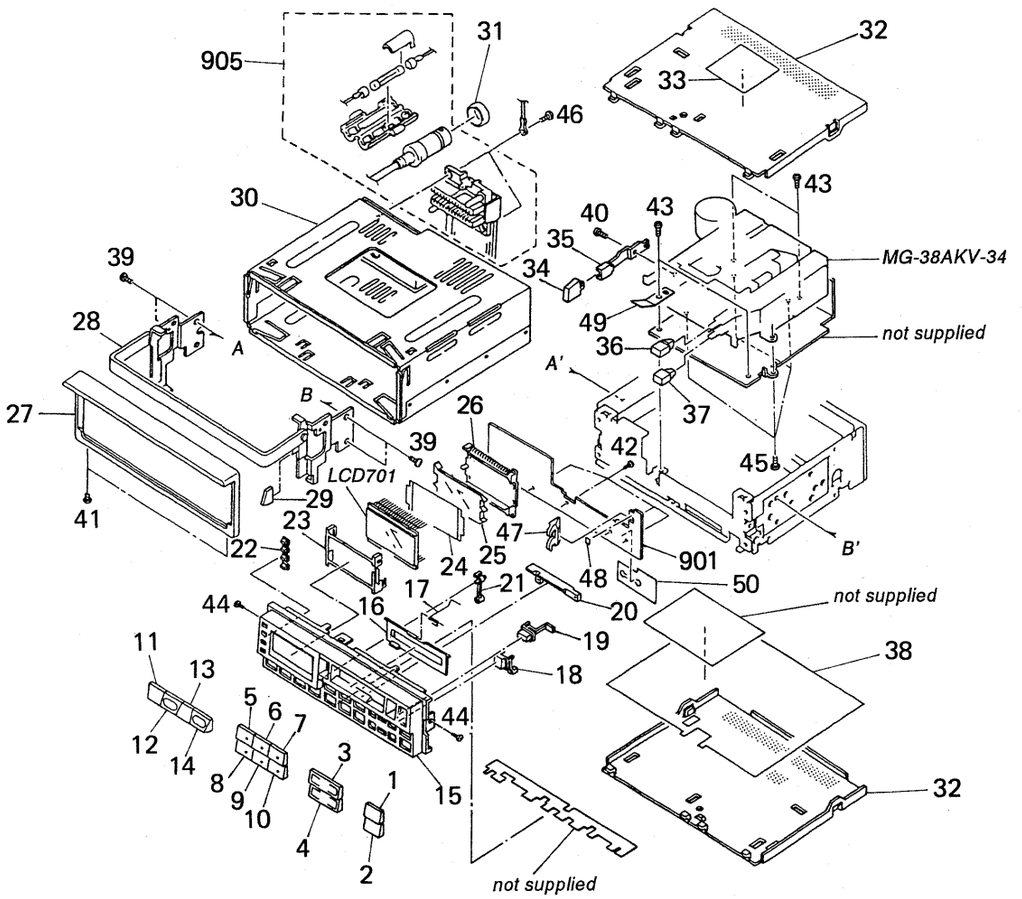

No.	Part No.	Description	Remarks
1	3-358-623-11	BUTTON (N1)(FM/AM)	
2	3-358-623-01	BUTTON (N1)(CD)	
3	3-358-630-01	BUTTON (S2)(SEEK TRACK)	
4	3-358-630-11	BUTTON (S2)(MANU DISK)	
5	3-358-624-01	BUTTON (N1P)(1.SHUF 1)	
6	3-358-624-11	BUTTON (N1P)(2.SHUF 2)	
7	3-358-624-21	BUTTON (N1P)(3.METAL)	
8	3-358-624-31	BUTTON (N1P)(4.AMS)	
9	3-358-624-41	BUTTON (N1P)(5.DOLBY)	
10	3-358-624-51	BUTTON (N1P)(6.ATA)	
11	3-358-626-01	BUTTON (MUTE)	
12	3-358-629-01	BUTTON (-)	
13	3-358-628-01	BUTTON (SELECT)	
14	3-358-627-01	BUTTON (+)	
15	3-358-625-01	PANEL, FRONT	
16	3-358-631-01	DOOR, CASSETTE	
17	3-349-454-01	SPRING (C DOOR), TORSION	
18	3-357-077-01	BUTTON (TAPE)	
19	3-357-076-01	BUTTON (OFF)	
20	3-357-084-01	PLATE (C DOOR), LIGHT GUIDE	
21	3-357-078-01	BUTTON (RESET)	
22	3-357-082-01	BUTTON (4 GANG) (W)	
23	3-357-091-01	PLATE (LCD), GROUND	
24	3-349-440-01	SHEET (REFLECTOR)	
25	*3-357-086-01	PLATE (LCD), LIGHT GUIDE	
26	*3-357-087-01	HOLDER (LCD)	
27	3-344-564-01	FRAME, ORNAMENTAL	
28	X-3344-508-1	HANDLE ASSY	
29	3-344-526-02	BUTTON (RELEASE)	
30	*X-3344-509-3	BRACKET ASSY	
31	3-566-347-00	COVER (A), CONNECTOR	
32	*3-353-402-51	COVER	
33	*3-358-632-01	LABEL, MODEL NUMBER	
34	3-357-081-01	BUTTON (EJECT)	
35	*3-357-092-01	LEVER (ELECT)	
36	3-357-079-01	BUTTON (FF)	
37	3-357-080-01	BUTTON (REW)	
38	*3-344-560-01	INSULATOR (3)	
39	3-344-561-21	SCREW (M4X4)	
40	4-885-599-00	SCREW, FITTING, REINFORCEMENT	
41	7-627-553-38	SCREW, PRECISION +P 2X3	
42	7-685-103-19	SCREW +P 2X5 TYPE2 NON-SLIT	
43	7-621-770-67	SCREW +PTT 2.6X6 (S)	
44	7-621-770-87	SCREW +PTT 2.6X5 (S)	
45	7-621-773-86	SCREW +PTT 2.6X4 (S)	
46	7-682-652-09	SCREW +PSW 3X16	
47	3-357-085-01	PLATE (F/R), LIGHT GUIDE	
48	*3-901-417-01	SPACER	
49	*3-358-664-01	PLATE (K), GROUND	
50	*3-358-654-01	SHEET (KEY), INSULATING	
901	*1-634-178-11	PC BOARD, SWITCH	
905	1-575-559-11	CORD, CONNECTOR	
LCD701	1-808-975-11	DISPLAY PANEL, LIQUID CRYSTAL	

(2) CHASSIS SECTION

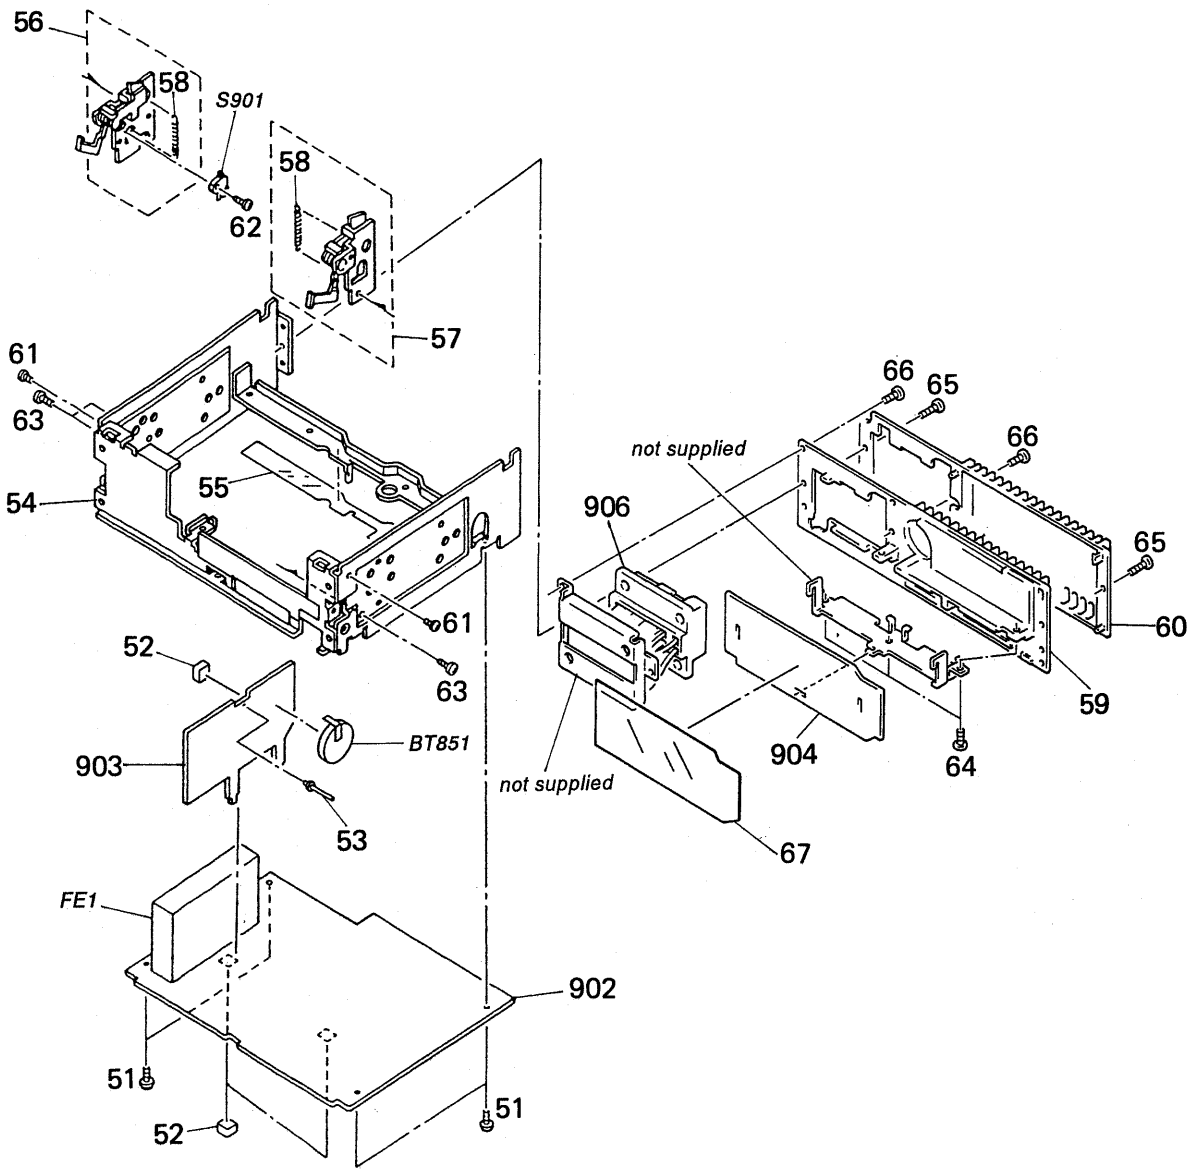

No.	Part No.	Description	Remarks
51	3-344-501-11	SCREW (+ PTT 3X8), GROUND POINT	
52	9-911-841-XX	CUSHION, CASSETTE LID	
53	*3-847-723-00	PIN, LEAD	
54	*X-3344-517-1	CHASSIS ASSY	
55	*3-357-098-01	INSULATOR (CHASSIS)	
56	X-3344-502-1	LOCK ASSY (LEFT)	58
57	X-3344-503-1	LOCK ASSY (RIGHT)	58
58	3-645-189-00	SPRING, TENSION	
59	*3-357-093-01	HEAT SINK	
60	*3-357-097-01	COVER	
61	7-627-553-38	SCREW, PRECISION +P 2X3	
62	7-621-283-00	SCREW +P 2X5	
63	7-621-773-86	SCREW +PTT 2.6X4 (S)	
64	7-685-133-19	SCREW +P 2.6X6 TYPE2 SLIT	
65	7-621-770-XX	SCREW +PTT 2.6X8 (S)	
66	7-682-547-04	SCREW +PTT 3X6 'S)	
67	*3-358-653-01	SHEET (POWER), INSULATING	
902	*A-3222-071-A	PC BOARD ASSY, MAIN	
903	*1-634-045-11	PC BOARD, ARI	
904	*A-3271-491-A	MOUNTED PCB, POWER	
906	1-575-560-11	CORD, CONNECTOR	
BT851	1-528-225-31	BATTERY, LITHIUM	
FE1	1-465-405-11	TUNER UNIT (FM/AM)	
S901	1-570-771-11	SWITCH (POWER)	

(3) MD SECTION-1

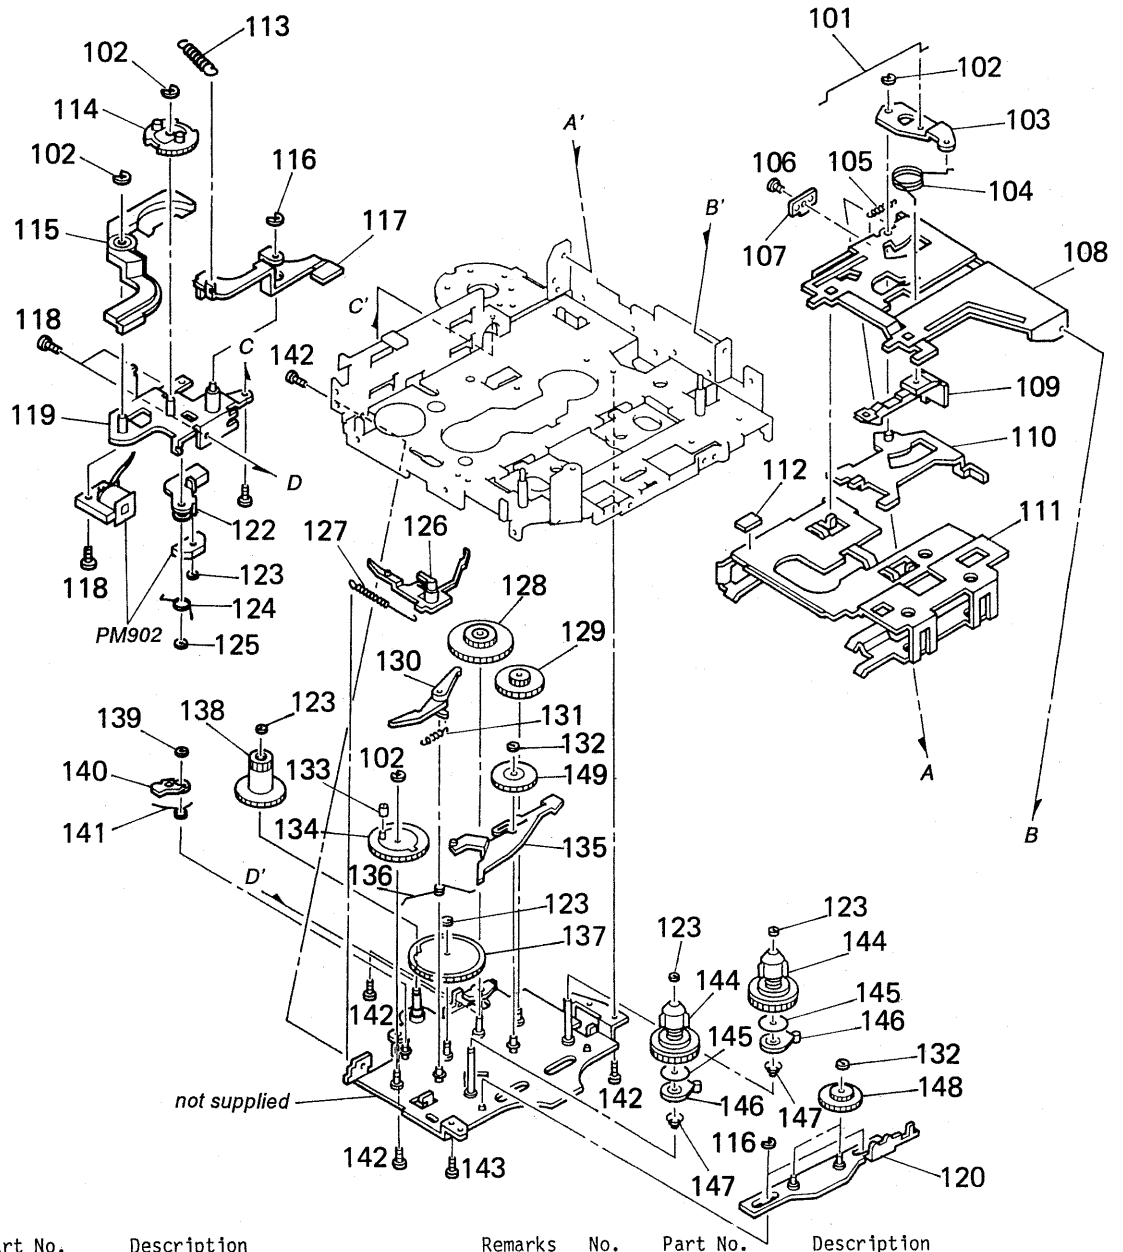

No.	Part No.	Description	Remarks
101	3-392-969-01	LINK, RETURN	
102	7-624-104-04	STOP RING 2.0, TYPE -E	
103	*3-392-932-01	PLATE, CENTER	
104	3-392-961-01	SPRING (B)	
105	3-392-953-01	SPRING	
106	7-621-772-00	SCREW +B 2X3	
107	*3-397-416-01	PLATE, SWITCH	
108	*3-392-973-01	HANGER, CASSETTE	
109	3-392-972-01	HOOKER, TAPE	
110	*3-392-921-01	LOCK ASSY, EJECT CAM	
111	*3-392-977-01	HOLDER, CASSETTE	
112	*3-392-968-01	CUSHION, C.H	
113	3-397-436-01	SPRING, STAND-BY	
114	3-397-411-01	GEAR ASSY, STAND-BY	
115	3-397-462-01	ARM, REVERSE LOCK	
116	7-624-102-04	STOP RING 1.5, TYPE -E	
117	*3-397-405-01	CAM ASSY, STAND-BY	
118	4-908-792-31	SCREW (B2) (M2X4), TAPPING	
119	*3-397-404-01	BRACKET ASSY, SOLENOID	
120	*3-397-402-01	ARM (C) ASSY, F.R	
121	7-627-553-17	PRECISION SCREW +P 2X2 TYPE 3	
122	*3-397-406-01	LOCK ASSY, STAND-BY GEAR	
123	3-676-387-00	POLY-SLIDER (DIA.1.6)	
124	3-397-441-01	SPRING, STAND-BY GEAR LOCK	
125	3-570-615-11	POLY-WASHER (DIA.1.2)	

No.	Part No.	Description	Remarks
126	3-397-460-01	RATCHET	
127	3-392-959-01	SPRING	
128	3-397-420-01	GEAR (B)	
129	3-397-419-01	GEAR (A)	
130	3-392-989-02	ARM, GEAR LOCK	
131	3-392-949-02	SPRING	
132	3-570-615-00	POLY-WASHER (DIA.1.2)	
133	3-392-944-01	COLLAR (CELECTER GEAR)	
134	3-392-987-01	GEAR, SELECTOR	
135	3-397-459-01	ARM, SENSOR	
136	3-397-429-01	SPRING, DASH	
137	3-397-458-01	GEAR, DETECTION	
138	3-397-426-01	GEAR, ROAD	
139	3-559-408-11	WASHER, POLYETHYLENE, DIA.1.2	
140	3-397-425-01	GEAR, SELECTOR LOCK	
141	3-397-440-01	SPRING, SELECTOR GEAR LOCK	
142	*4-908-792-11	SCREW (B2X3), TAPPING, P1	
143	7-621-255-20	SCREW +PTT 2X4 (S)	
144	3-397-409-01	SPINDLE ASSY, REEL	
145	3-397-450-01	WASHER, STAINLESS	
146	3-397-423-01	CAM, DETECTION	
147	3-397-430-01	SPRING, BACK TENSION	
148	3-397-422-01	GEAR, F.R	
149	3-397-421-01	GEAR, IDLE	
PM902	1-454-517-11	SOLENOID, PLUNGER	

(4) MD SECTION-2

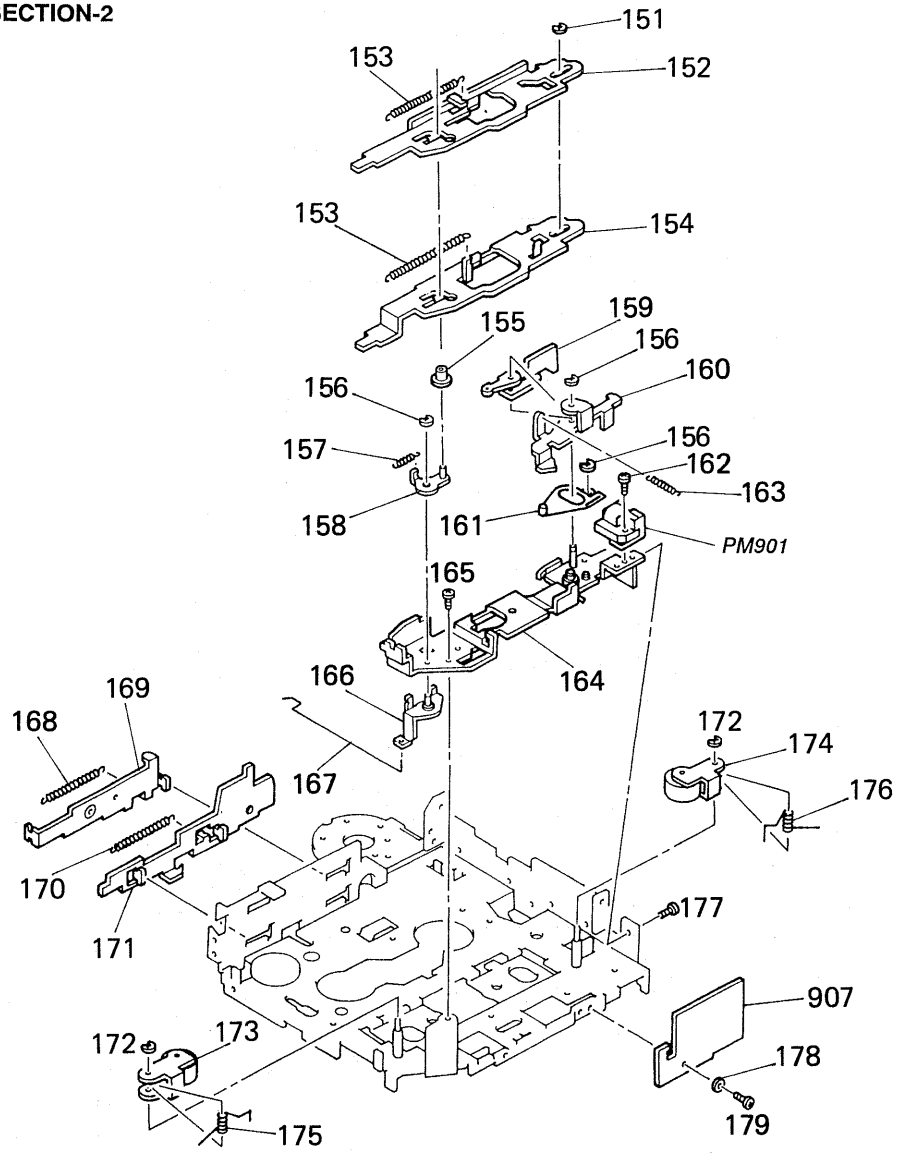

No.	Part No.	Description	Remarks
151	7-624-104-04	STOP RING 2.0, TYPE -E	
152	*3-397-456-01	LEVER (Z), FF	
153	3-397-431-01	SPRING, FF/REW LEVER	
154	*3-397-457-01	LEVER (Z), REW	
155	3-392-994-01	ROLLER, PROGRAM	
156	7-624-102-04	STOP RING 1.5, TYPE -E	
157	3-397-439-01	SPRING, PROGRAM ARM	
158	*3-397-407-01	ARM ASSY, PROGRAM	
159	3-392-903-01	ARM, RELEASE	
160	*3-392-904-01	ARM (A), LOCK	
161	*3-397-415-01	ARM (A) ASSY, F.R	
162	3-896-913-11	SCREW (B2X6), P3 TAPPING	
163	3-392-917-01	SPRING	
164	*3-397-403-01	BRACKET ASSY, LEVER	
165	7-621-255-25	SCREW +PTT 2X4 (S)	
166	*3-392-920-01	LEVER (A) ASSY, CHANGE	
167	3-392-966-01	LINK, SELECTOR	
168	3-397-437-01	SPRING, EJECT LEVER	
169	*3-392-978-01	LEVER, EJECT	
170	3-397-438-01	SPRING, EJECT CAM	
171	*3-397-417-01	CAM ASSY, EJECT	
172	7-624-102-04	STOP RING 1.5, TYPE -E	
173	*3-392-927-01	ARM (R) ASSY, PINCH	
174	*3-392-928-01	ARM (F) ASSY, PINCH	
175	3-392-958-01	SPRING (R)	
176	3-392-957-01	SPRING (F)	
177	7-621-555-10	SCREW +K 2X3	
178	7-623-205-22	SW 2, TYPE 2	
179	4-908-792-31	SCREW (B2) (M2X4), TAPPING	
907	*3-397-444-01	SWITCH (PWB)	
PM901	1-454-464-11	SOLENOID, PLUNGER	

(5) MD SECTION-3

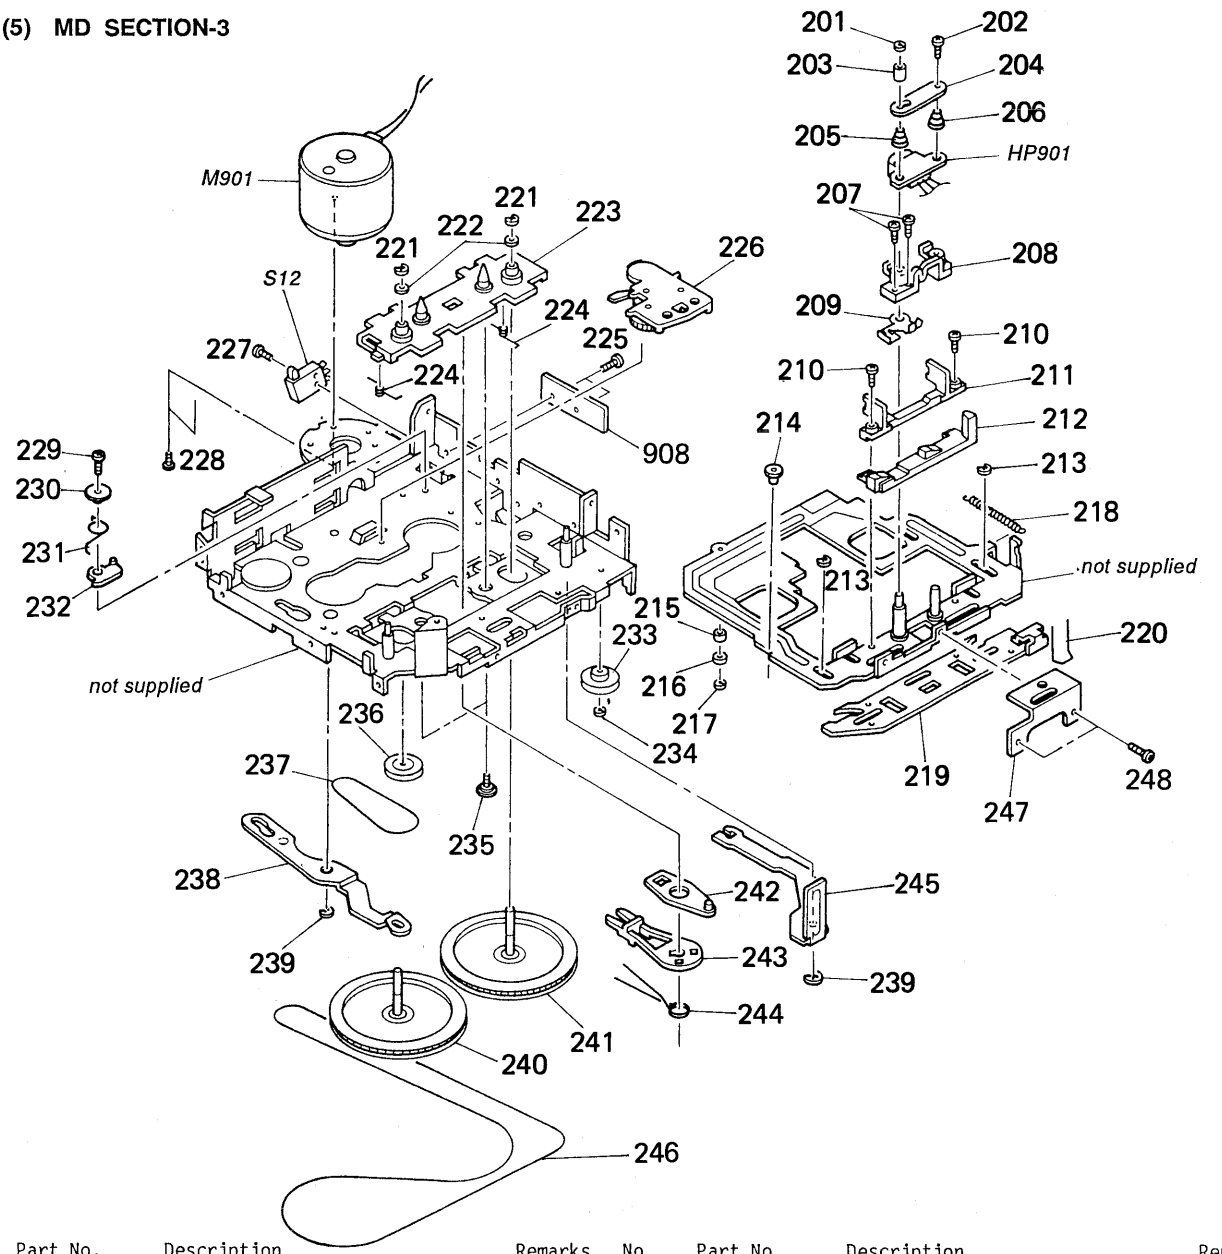

No.	Part No.	Description	Remarks
201	3-676-387-00	POLY-SLIDER (DIA.1.6)	
202	7-627-553-48	SCREW, PRECISION +P 2X4	
203	3-392-998-01	ROLLER (A), FF	
204	*3-392-930-01	RETAINER, SPRING	
205	3-397-433-01	SPRING (B), ADJUSTOR ARM	
206	3-397-432-01	SPRING (A), ADJUSTOR ARM	
207	3-392-909-01	SCREW, AZIMUTH ADJUSTMENT	
208	3-392-988-01	ARM, ADJUSTOR	
209	3-392-931-01	SEAM, ADJUSTOR	
210	7-627-553-88	SCREW, PRECISION +P 2X7	
211	3-392-984-01	GUIDE, TAPE	
212	3-392-971-01	LINK, ADJUSTOR	
213	7-624-118-01	RING, RETAINING E-2.5	
214	3-397-428-01	COLLAR, H.P	
215	3-392-942-01	ROLLER (B), H.P	
216	3-392-945-01	ROLLER (A), H.P	
217	3-570-615-00	POLY-WASHER (DIA.1.2)	
218	3-392-952-01	SPRING	
219	*3-397-401-01	ARM (A) ASSY, FR SELECTION	
220	3-392-962-01	SPRING	
221	3-590-768-00	RING (A), E	
222	3-701-437-11	POLY-SLIDER (A)	
223	3-392-914-01	BRACKET ASSY, CM	
224	3-392-963-01	SPRING (R)	
225	7-621-775-00	SCREW +P 2.6X3	
226	3-397-410-01	ARM ASSY, T.U	

No.	Part No.	Description	Remarks
227	3-318-203-11	SCREW (B1.7X6), TAPPING	
228	7-627-554-07	PRECISION SCREW +P 2X2.2 TYPE 3	
229	4-908-792-31	SCREW (B2) (M2X4), TAPPING	
230	*3-397-427-01	COLLAR, MUTE ARM	
231	3-397-434-01	SPRING, MUTE ARM	
232	*3-397-424-01	ARM, MUTE	
233	3-392-941-01	PULLEY (A), IDLE	
234	3-570-615-00	POLY-WASHER (DIA.1.2)	
235	3-392-918-01	SCREW, EJECT HOOK	
236	3-397-418-01	GEAR, PULLEY	
237	3-397-442-01	BELT, SUB	
238	*3-392-979-01	LEVER, REVERSE	
239	7-624-104-04	STOP RING 2.0, TYPE -E	
240	3-397-413-01	FLYWHEEL ASSY (BR)	
241	3-397-412-01	FLYWHEEL ASSY (BF)	
242	*3-397-408-01	ARM (D) ASSY, F.R	
243	3-397-461-01	ARM, FF	
244	3-397-435-01	SPRING, FF ARM	
245	*3-397-455-01	ARM (B), F.R	
246	3-397-443-01	BELT, MAIN	
247	*3-397-463-01	REINFORCEMENT	
248	3-397-464-01	SCREW, REINFORCEMENT FITTING	
908	*3-397-446-01	MUTE (PWB)	
HP901	1-543-717-11	HEAD, MAGNETIC (PLAYBACK)	
M901	3-397-414-01	MOTOR ASSY	
S12	1-554-790-11	SWITCH, POWER (PACK-IN)	

SECTION 7
ELECTRICAL PARTS LIST

NOTE:

- Due to standardization, replacements in the parts list may be different from the parts specified in the diagrams or the components used on the set.
- Items marked "★" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- If there are two or more same circuits in a set such as a stereophonic machine, only typical circuit parts may be indicated and capacitors and resistors in other same circuits may be omitted.

CAPACITORS:
MF: μF, PF: μμF.

RESISTORS
- All resistors are in ohms.
- F: nonflammable

COILS
- MMH: mH, UH: μH

SEMICONDUCTORS
In each case, U: μ, for example:
UA...: μA..., UPA...: μPA...,
UPC...: μPC, UPD...: μPD...

The components identified by mark ⚠ or dotted line with mark ⚠ are critical for safety.
Replace only with part number specified.

Ref.No.	Part No.	Description			
901	*1-634-178-11	PC BOARD, SWITCH			
902	*A-3222-071-A	PC BOARD ASSY, MAIN			
903	*1-634-045-11	PC BOARD, ARI			
904	*A-3271-491-A	MOUNTED PCB, POWER			
905	1-575-559-11	CORD, CONNECTOR			
906	1-575-560-11	CORD, CONNECTOR			
907	*3-397-444-01	SWITCH (PWB)			
908	*3-397-446-01	MUTE (PWB)			
BT851	1-528-225-31	BATTERY, LITHIUM			
C1	1-126-157-11	ELECT	10MF	20%	16V
C2	1-124-234-00	ELECT	22MF	20%	16V
C3	1-126-281-11	ELECT	4.7MF	20%	16V
C4	1-130-473-00	MYLAR	0.0015MF	5%	50V
C5	1-163-189-00	CERAMIC CHIP	220PF	5%	50V
C6	1-124-438-00	ELECT	1MF	20%	50V
C7	1-124-464-11	ELECT	0.22MF	20%	50V
C8	1-124-443-00	ELECT	100MF	20%	10V
C9	1-126-281-11	ELECT	4.7MF	20%	16V
C10	1-163-053-00	CERAMIC CHIP	0.0033MF	10%	50V
C11	1-130-487-00	FILM	0.022MF	5%	50V
C12	1-163-063-00	CERAMIC CHIP	0.022MF	10%	50V
C13	1-124-438-00	ELECT	1MF	20%	50V
C14	1-130-487-00	FILM	0.022MF	5%	50V
C15	1-130-487-00	FILM	0.022MF	5%	50V
C16	1-163-161-00	CERAMIC CHIP	15PF	5%	50V
C17	1-163-161-00	CERAMIC CHIP	15PF	5%	50V
C18	1-163-063-00	CERAMIC CHIP	0.022MF	10%	50V
C19	1-126-157-11	ELECT	10MF	20%	16V
C20	1-136-165-00	FILM	0.1MF	5%	50V
C21	1-124-257-00	ELECT	2.2MF	20%	50V
C22	1-163-059-00	CERAMIC CHIP	0.01MF	10%	50V
C23	1-126-566-11	ELECT	3.3MF	20%	25V
C24	1-126-566-11	ELECT	3.3MF	20%	25V
C25	1-130-487-00	FILM	0.022MF	5%	50V
C26	1-163-059-00	CERAMIC CHIP	0.01MF	10%	50V
C27	1-124-242-00	ELECT	33MF	20%	16V
C28	1-163-063-00	CERAMIC CHIP	0.022MF	10%	50V
C29	1-163-063-00	CERAMIC CHIP	0.022MF	10%	50V
C30	1-163-053-00	CERAMIC CHIP	0.0033MF	10%	50V
C31	1-163-063-00	CERAMIC CHIP	0.022MF	10%	50V
C32	1-124-584-00	ELECT	100MF	20%	10V
C33	1-126-157-11	ELECT	10MF	20%	16V
C34	1-163-063-00	CERAMIC CHIP	0.022MF	10%	50V
C35	1-163-063-00	CERAMIC CHIP	0.022MF	10%	50V
C36	1-163-063-00	CERAMIC CHIP	0.022MF	10%	50V
C37	1-163-059-00	CERAMIC CHIP	0.01MF	10%	50V
C101	1-126-281-11	ELECT	4.7MF	20%	16V
C102	1-130-467-00	MYLAR	470PF	5%	50V
C103	1-128-054-11	ELECT	22MF	20%	10V
C104	1-136-153-00	FILM	0.01MF	5%	50V
C105	1-126-157-11	ELECT	10MF	20%	16V
C106	1-124-438-00	ELECT	1MF	20%	50V
C107	1-126-157-11	ELECT	10MF	20%	16V
C108	1-131-587-11	TANTALUM	0.68MF	10%	35V
C118	1-124-464-11	ELECT	0.22MF	20%	50V
C119	1-126-157-11	ELECT	10MF	20%	16V
C120	1-163-167-00	CERAMIC CHIP	27PF	5%	50V
C121	1-130-476-00	MYLAR	0.0027MF	5%	50V
C122	1-136-162-00	FILM	0.056MF	5%	50V
C123	1-136-162-00	FILM	0.056MF	5%	50V
C124	1-126-157-11	ELECT	10MF	20%	16V
C125	1-130-477-00	MYLAR	0.0033MF	5%	50V
C128	1-126-157-11	ELECT	10MF	20%	16V
C129	1-124-464-11	ELECT	0.22MF	20%	50V
C130	1-126-157-11	ELECT	10MF	20%	16V
C133	1-124-584-00	ELECT	100MF	20%	10V
C134	1-126-157-11	ELECT	10MF	20%	16V
C135	1-126-157-11	ELECT	10MF	20%	16V
C136	1-126-157-11	ELECT	10MF	20%	16V
C139	1-163-205-00	CERAMIC CHIP	0.001MF	5%	50V
C140	1-163-205-00	CERAMIC CHIP	0.001MF	5%	50V
C141	1-163-181-00	CERAMIC CHIP	100PF	5%	50V
C201	1-126-281-11	ELECT	4.7MF	20%	16V
C202	1-130-467-00	MYLAR	470PF	5%	50V
C203	1-128-054-11	ELECT	22MF	20%	10V
C204	1-136-153-00	FILM	0.01MF	5%	50V
C205	1-126-157-11	ELECT	10MF	20%	16V
C206	1-124-438-00	ELECT	1MF	20%	50V
C207	1-126-157-11	ELECT	10MF	20%	16V
C208	1-131-587-11	TANTALUM	0.68MF	10%	35V
C218	1-124-464-11	ELECT	0.22MF	20%	50V
C219	1-126-157-11	ELECT	10MF	20%	16V
C220	1-163-167-00	CERAMIC CHIP	27PF	5%	50V
C221	1-130-476-00	MYLAR	0.0027MF	5%	50V
C222	1-136-162-00	FILM	0.056MF	5%	50V
C223	1-136-162-00	FILM	0.056MF	5%	50V
C224	1-126-157-11	ELECT	10MF	20%	16V
C225	1-130-477-00	MYLAR	0.0033MF	5%	50V
C228	1-126-157-11	ELECT	10MF	20%	16V
C229	1-124-464-11	ELECT	0.22MF	20%	50V

Ref.No.	Part No.	Description			
C230	1-126-157-11	ELECT	10MF	20%	16V
C233	1-124-584-00	ELECT	100MF	20%	10V
C234	1-126-157-11	ELECT	10MF	20%	16V
C235	1-126-157-11	ELECT	10MF	20%	16V
C236	1-126-157-11	ELECT	10MF	20%	16V
C239	1-163-205-00	CERAMIC CHIP	0.001MF	5%	50V
C240	1-163-205-00	CERAMIC CHIP	0.001MF	5%	50V
C241	1-163-181-00	CERAMIC CHIP	100PF	5%	50V
C301	1-124-360-00	ELECT	1000MF	20%	16V
C302	1-126-154-11	ELECT	47MF	20%	6.3V
C303	1-124-584-00	ELECT	100MF	20%	10V
C304	1-124-234-00	ELECT	22MF	20%	16V
C305	1-124-229-00	ELECT	33MF	20%	10V
C306	1-124-229-00	ELECT	33MF	20%	10V
C307	1-163-205-00	CERAMIC CHIP	0.001MF	5%	50V
C308	1-126-157-11	ELECT	10MF	20%	16V
C309	1-126-157-11	ELECT	10MF	20%	16V
C310	1-124-463-00	ELECT	0.1MF	20%	50V
C311	1-126-566-11	ELECT	3.3MF	20%	25V
C312	1-126-157-11	ELECT	10MF	20%	16V
C314	1-124-229-00	ELECT	33MF	20%	10V
C315	1-124-589-11	ELECT	47MF	20%	10V
C316	1-124-225-00	ELECT	100MF	20%	6.3V
C317	1-126-157-11	ELECT	10MF	20%	16V
C318	1-124-584-00	ELECT	100MF	20%	10V
C320	1-163-169-00	CERAMIC CHIP	33PF	5%	50V
C321	1-163-169-00	CERAMIC CHIP	33PF	5%	50V
C322	1-124-589-11	ELECT	47MF	20%	10V
C323	1-163-063-00	CERAMIC CHIP	0.022MF	10%	50V
C324	1-126-157-11	ELECT	10MF	20%	16V
C325	1-162-637-11	CERAMIC CHIP	0.47MF		16V
C327	1-163-205-00	CERAMIC CHIP	0.001MF	5%	50V
C328	1-163-063-00	CERAMIC CHIP	0.022MF	10%	50V
C329	1-163-063-00	CERAMIC CHIP	0.022MF	10%	50V
C330	1-163-063-00	CERAMIC CHIP	0.022MF	10%	50V
C331	1-124-438-00	ELECT	1MF	20%	50V
C332	1-163-063-00	CERAMIC CHIP	0.022MF	10%	50V
C333	1-124-229-00	ELECT	33MF	20%	10V
C334	1-163-063-00	CERAMIC CHIP	0.022MF	10%	50V
C335	1-124-438-00	ELECT	1MF	20%	50V
C336	1-124-438-00	ELECT	1MF	20%	50V
C337	1-124-229-00	ELECT	33MF	20%	10V
C338	1-163-189-00	CERAMIC CHIP	220PF	5%	50V
C339	1-163-063-00	CERAMIC CHIP	0.022MF	10%	50V
C340	1-124-234-00	ELECT	22MF	20%	16V
C342	1-162-637-11	CERAMIC CHIP	0.47MF		16V
C400	1-162-294-31	CERAMIC	0.001MF	10%	50V
C501	1-124-257-00	ELECT	2.2MF	20%	50V
C502	1-124-234-00	ELECT	22MF	20%	10V
C503	1-136-166-00	FILM	0.12MF	5%	50V
C504	1-136-166-00	FILM	0.12MF	5%	50V
C505	1-163-181-00	CERAMIC CHIP	100PF	5%	50V
C551	1-124-257-00	ELECT	2.2MF	20%	50V
C552	1-124-234-00	ELECT	22MF	20%	10V
C553	1-136-166-00	FILM	0.12MF	5%	50V
C554	1-136-166-00	FILM	0.12MF	5%	50V
C555	1-163-181-00	CERAMIC CHIP	100PF	5%	50V

Ref.No.	Part No.	Description			
C591	1-128-060-11	ELECT	4700MF	20%	16V
C592	1-136-165-00	FILM	0.1MF	5%	50V
C593	1-163-173-00	CERAMIC CHIP	47PF	5%	50V
C595	1-126-176-11	ELECT	220MF	20%	10V
C601	1-124-257-00	ELECT	2.2MF	20%	50V
C602	1-124-234-00	ELECT	22MF	20%	10V
C603	1-136-166-00	FILM	0.12MF	5%	50V
C604	1-136-166-00	FILM	0.12MF	5%	50V
C605	1-163-181-00	CERAMIC CHIP	100PF	5%	50V
C651	1-124-257-00	ELECT	2.2MF	20%	50V
C652	1-124-234-00	ELECT	22MF	20%	10V
C653	1-136-166-00	FILM	0.12MF	5%	50V
C654	1-136-166-00	FILM	0.12MF	5%	50V
C655	1-163-181-00	CERAMIC CHIP	100PF	5%	50V
C695	1-126-176-11	ELECT	220MF	20%	10V
C700	1-161-494-00	CERAMIC	0.022MF		25V
C701	1-161-494-00	CERAMIC	0.022MF		25V
C791	1-163-201-00	CERAMIC CHIP	680PF	5%	50V
C792	1-162-637-11	CERAMIC CHIP	0.47MF		16V
C793	1-162-637-11	CERAMIC CHIP	0.47MF		16V
C794	1-162-637-11	CERAMIC CHIP	0.47MF		16V

CNP901*	1-506-984-31	PIN, CONNECTOR (PC BOARD) 2P
CNP902*	1-506-984-11	PIN, CONNECTOR (PC BOARD) 2P
CNP903*	1-506-989-11	PIN, CONNECTOR (PC BOARD) 7P
CNP904*	1-566-011-11	PIN, CONNECTOR (PC BOARD) 14P
CNP905*	1-506-985-11	PIN, CONNECTOR (PC BOARD) 3P
CNP906*	1-506-999-11	PIN, CONNECTOR (PC BOARD) 3P
CNP907*	1-506-989-11	PIN, CONNECTOR (PC BOARD) 7P
CNP908*	1-506-986-11	PIN, CONNECTOR (PC BOARD) 4P
CNP909*	1-506-993-11	PIN, CONNECTOR (PC BOARD) 11P
CNP910*	1-506-985-11	PIN, CONNECTOR (PC BOARD) 3P
CNP911*	1-506-984-11	PIN, CONNECTOR (PC BOARD) 2P
CNP912*	1-506-984-11	PIN, CONNECTOR (PC BOARD) 2P
CNP913*	1-506-999-11	PIN, CONNECTOR (PC BOARD) 3P
CNP914*	1-506-987-11	PIN, CONNECTOR (PC BOARD) 5P
CNP915*	1-506-986-11	PIN, CONNECTOR (PC BOARD) 4P
CNP916*	1-506-985-11	PIN, CONNECTOR (PC BOARD) 3P
CNP921*	1-564-511-11	PLUG, CONNECTOR 8P
CNP922*	1-566-693-11	PIN, CONNECTOR 2P

D1	8-719-104-34	DIODE 1S2836
D2	8-719-104-34	DIODE 1S2836
D3	8-719-110-13	DIODE RD9.1ES-B2
D4	8-719-109-89	DIODE RD5.6ES-B2
D5	8-719-110-13	DIODE RD9.1ES-B2
D101	8-719-109-74	DIODE RD4.7ES-B1
D201	8-719-109-74	DIODE RD4.7ES-B1
D301	8-719-911-19	DIODE 1SS119
D302	8-719-911-19	DIODE 1SS119
D303	8-719-109-81	DIODE RD4.7ES-B2
D304	8-719-400-18	DIODE MA152WK
D305	8-719-109-96	DIODE RD6.8ES-B1
D306	8-719-109-84	DIODE RD5.1ES-B1
D307	8-719-109-96	DIODE RD6.8ES-B1
D308	8-719-109-96	DIODE RD6.8ES-B1
D309	8-719-109-96	DIODE RD6.8ES-B1
D310	8-719-109-96	DIODE RD6.8ES-B1
D311	8-719-109-96	DIODE RD6.8ES-B1

Ref.No.	Part No.	Description
D312	8-719-911-19	DIODE 1SS119
D313	8-719-911-19	DIODE 1SS119
D314	8-719-911-19	DIODE 1SS119
D315	8-719-911-19	DIODE 1SS119
D319	8-719-911-19	DIODE 1SS119
D325	8-719-911-19	DIODE 1SS119
D326	8-719-911-19	DIODE 1SS119
D327	8-719-911-19	DIODE 1SS119
D328	8-719-911-19	DIODE 1SS119
D329	8-719-911-19	DIODE 1SS119
D330	8-719-911-19	DIODE 1SS119
D331	8-719-911-19	DIODE 1SS119
D333	8-719-110-22	DIODE RD11ES-B2
D334	8-719-110-13	DIODE RD9.1ES-B2
D335	8-719-101-61	DIODE RD6.2EL2
D336	8-719-104-34	DIODE 1S2836
D337	8-719-110-13	DIODE RD9.1ES-B2
D338	8-719-101-61	DIODE RD6.2EL2
D339	8-719-400-18	DIODE MA152WK
D340	8-719-109-72	DIODE RD3.9ES-B2
D341	8-719-110-13	DIODE RD9.1ES-B2
D342	8-719-109-89	DIODE RD5.6ES-B2
D344	8-719-109-89	DIODE RD5.6ES-B2
D345	8-719-400-18	DIODE MA152WK
D346	8-719-976-19	DIODE RLS-4148
D347	8-719-976-19	DIODE RLS-4148
D348	8-719-976-19	DIODE RLS-4148
D591	8-719-945-59	DIODE DSA3A4
D701	8-719-951-39	DIODE CL-50Y-CD
D702	8-719-951-39	DIODE CL-50Y-CD
D703	8-719-951-39	DIODE CL-50Y-CD
D704	8-719-951-39	DIODE CL-50Y-CD
D705	8-719-951-39	DIODE CL-50Y-CD
D706	8-719-951-39	DIODE CL-50Y-CD
D707	8-719-951-39	DIODE CL-50Y-CD
D708	8-719-951-39	DIODE CL-50Y-CD
D709	8-719-951-39	DIODE CL-50Y-CD
D710	8-719-951-39	DIODE CL-50Y-CD
D711	8-719-951-39	DIODE CL-50Y-CD
D712	8-719-951-39	DIODE CL-50Y-CD
D713	8-719-951-39	DIODE CL-50Y-CD
D714	8-719-951-39	DIODE CL-50Y-CD
D715	8-719-951-39	DIODE CL-50Y-CD
D716	8-719-951-39	DIODE CL-50Y-CD
D717	8-719-951-39	DIODE CL-50Y-CD
D718	8-719-951-39	DIODE CL-50Y-CD
D719	8-719-951-39	DIODE CL-50Y-CD
D720	8-719-951-39	DIODE CL-50Y-CD
D721	8-719-951-39	DIODE CL-50Y-CD
D722	8-719-951-39	DIODE CL-50Y-CD
D723	8-719-951-39	DIODE CL-50Y-CD
D724	8-719-951-39	DIODE CL-50Y-CD
D725	8-719-951-39	DIODE CL-50Y-CD
D851	8-719-911-19	DIODE 1SS119
FE1	1-465-405-11	TUNER UNIT (FM/AM)
HP901	1-543-717-11	HEAD, MAGNETIC (PLAYBACK)

Ref.No.	Part No.	Description
IC1	1-808-516-11	IC NMX3S920
IC2	8-759-821-41	IC LM7000N
IC101	8-759-631-10	IC M51524FP
IC102	8-759-932-64	IC BU4052BF
IC103	8-752-032-14	IC CXA1102M
IC104	8-759-820-15	IC LC7537AN
IC105	8-759-909-71	IC BA4558F
IC106	8-759-909-71	IC BA4558F
IC107	8-759-909-71	IC BA4558F
IC108	8-759-909-71	IC BA4558F
IC109	8-759-909-71	IC BA4558F
IC110	8-759-909-71	IC BA4558F
IC111	8-759-631-00	IC M5280FP
IC301	8-759-149-68	IC UPD75116GF-625-3BE
IC302	8-759-932-54	IC BU4066BF
IC501	8-759-230-61	IC TA8205AH
IC601	8-759-230-61	IC TA8205AH
IC701	8-759-821-44	IC LC7582
JR2	1-216-296-00	METAL GLAZE 0 5% 1/8W
JR3	1-216-296-00	METAL GLAZE 0 5% 1/8W
JR4	1-216-296-00	METAL GLAZE 0 5% 1/8W
JR5	1-216-296-00	METAL GLAZE 0 5% 1/8W
JR6	1-216-296-00	METAL GLAZE 0 5% 1/8W
JR101	1-216-296-00	METAL GLAZE 0 5% 1/8W
JR102	1-216-296-00	METAL GLAZE 0 5% 1/8W
JR103	1-216-296-00	METAL GLAZE 0 5% 1/8W
JR105	1-216-296-00	METAL GLAZE 0 5% 1/8W
JR106	1-216-296-00	METAL GLAZE 0 5% 1/8W
JR107	1-216-296-00	METAL GLAZE 0 5% 1/8W
JR108	1-216-296-00	METAL GLAZE 0 5% 1/8W
JR109	1-216-296-00	METAL GLAZE 0 5% 1/8W
JR501	1-216-296-00	METAL GLAZE 0 5% 1/8W
JR502	1-216-296-00	METAL GLAZE 0 5% 1/8W
JR503	1-216-296-00	METAL GLAZE 0 5% 1/8W
JR504	1-216-296-00	METAL GLAZE 0 5% 1/8W
JR505	1-216-296-00	METAL GLAZE 0 5% 1/8W
JR701	1-216-296-00	METAL GLAZE 0 5% 1/8W
L1	1-410-513-11	INDUCTOR 22UH
L301	1-408-111-00	INDUCTOR 3.3UH
L302	1-410-513-11	INDUCTOR 22UH
L303	1-410-513-11	INDUCTOR 22UH
LCD701	1-808-975-11	DISPLAY PANEL, LIQUID CRYSTAL
M901	3-397-414-01	MOTOR ASSY
PL701	1-518-646-11	LAMP, PILOT
PL702	1-518-646-11	LAMP, PILOT
PM901	1-454-464-11	SOLENOID, PLUNGER
PM902	1-454-517-11	SOLENOID, PLUNGER
Q1	8-729-100-66	TRANSISTOR 2SC1623
Q2	8-729-100-66	TRANSISTOR 2SC1623
Q3	8-729-100-66	TRANSISTOR 2SC1623
Q4	8-729-100-66	TRANSISTOR 2SC1623
Q5	8-729-100-66	TRANSISTOR 2SC1623
Q6	8-729-901-01	TRANSISTOR DTC144EK
Q7	8-729-901-04	TRANSISTOR DTA114EK
Q8	8-729-820-68	TRANSISTOR 2SD1802FAS
Q9	8-729-119-76	TRANSISTOR 2SA1175-HFE

Ref.No.	Part No.	Description
Q10	8-729-119-76	TRANSISTOR 2SA1175-HFE
Q11	8-729-106-68	TRANSISTOR 2SD1615A-GP
Q102	8-729-920-21	TRANSISTOR DTC314TKH04
Q103	8-729-920-21	TRANSISTOR DTC314TKH04
Q202	8-729-920-21	TRANSISTOR DTC314TKH04
Q203	8-729-920-21	TRANSISTOR DTC314TKH04
Q301	8-729-119-76	TRANSISTOR 2SA1175-HFE
Q302	8-729-900-53	TRANSISTOR DTC114EK
Q303	8-729-100-66	TRANSISTOR 2SC1623
Q304	8-729-807-50	TRANSISTOR 2SD1623
Q305	8-729-900-53	TRANSISTOR DTC114EK
Q307	8-729-900-53	TRANSISTOR DTC114EK
Q308	8-729-100-66	TRANSISTOR 2SC1623
Q309	8-729-820-68	TRANSISTOR 2SD1802FAS
Q310	8-729-100-66	TRANSISTOR 2SC1623
Q311	8-729-901-01	TRANSISTOR DTC144EK
Q312	8-729-820-68	TRANSISTOR 2SD1802FAS
Q313	8-729-106-68	TRANSISTOR 2SD1615A-GP
Q314	8-729-100-66	TRANSISTOR 2SC1623
Q315	8-729-216-22	TRANSISTOR 2SA1162
Q316	8-729-901-01	TRANSISTOR DTC144EK
Q319	8-729-820-68	TRANSISTOR 2SD1802FAS
Q323	8-729-901-04	TRANSISTOR DTA114EK
Q324	8-729-900-53	TRANSISTOR DTC114EK
Q325	8-729-119-76	TRANSISTOR 2SA1175-HFE
Q326	8-729-100-66	TRANSISTOR 2SC1623
Q327	8-729-901-04	TRANSISTOR DTA114EK
Q328	8-729-216-22	TRANSISTOR 2SA1162
Q329	8-729-119-76	TRANSISTOR 2SA1175-HFE
Q330	8-729-900-53	TRANSISTOR DTC114EK
Q332	8-729-901-06	TRANSISTOR DTA144EK
Q702	8-729-904-78	TRANSISTOR DTD113ZK
R1	1-216-198-00	METAL GLAZE 1K 5% 1/8W
R2	1-216-202-00	METAL GLAZE 1.5K 5% 1/8W
R3	1-216-194-00	METAL GLAZE 680 5% 1/8W
R4	1-216-229-00	METAL GLAZE 20K 5% 1/8W
R5	1-216-214-00	METAL GLAZE 4.7K 5% 1/8W
R6	1-216-150-00	METAL GLAZE 10 5% 1/8W
R7	1-216-222-00	METAL GLAZE 10K 5% 1/8W
R8	1-216-226-00	META' GLAZE 15K 5% 1/8W
R9	1-216-216-00	METAL GLAZE 5.6K 5% 1/8W
R10	1-216-238-00	METAL GLAZE 47K 5% 1/8W
R11	1-216-232-00	METAL GLAZE 27K 5% 1/8W
R12	1-216-210-00	METAL GLAZE 3.3K 5% 1/8W
R14	1-216-230-00	METAL GLAZE 22K 5% 1/8W
R15	1-216-230-00	METAL GLAZE 22K 5% 1/8W
R16	1-216-240-00	METAL GLAZE 56K 5% 1/8W
R17	1-216-240-00	METAL GLAZE 56K 5% 1/8W
R18	1-216-270-00	METAL GLAZE 1M 5% 1/8W
R19	1-216-216-00	METAL GLAZE 5.6K 5% 1/8W
R20	1-216-202-00	METAL GLAZE 1.5K 5% 1/8W
R21	1-216-198-00	METAL GLAZE 1K 5% 1'8W
R22	1-216-210-00	METAL GLAZE 3.3K 5% 1/8W
R23	1-216-222-00	METAL GLAZE 10K 5% 1/8W
R24	1-216-198-00	METAL GLAZE 1K 5% 1/8W
R25	1-216-212-00	METAL GLAZE 3.9K 5% 1/8W
R26	1-216-198-00	METAL GLAZE 1K 5% 1/8W
R27	1-216-210-00	METAL GLAZE 3.3K 5% 1/8W

Ref.No.	Part No.	Description
R28	1-216-214-00	METAL GLAZE 4.7K 5% 1/8W
R29	1-216-210-00	METAL GLAZE 3.3K 5% 1/8W
R30	1-216-198-00	METAL GLAZE 1K 5% 1/8W
R31	1-216-214-00	METAL GLAZE 4.7K 5% 1/8W
R32	1-216-214-00	METAL GLAZE 4.7K 5% 1/8W
R33	1-216-214-00	METAL GLAZE 4.7K 5% 1/8W
R34	1-216-216-00	METAL GLAZE 5.6K 5% 1/8W
R35	1-216-206-00	METAL GLAZE 2.2K 5% 1/8W
R36	1-216-190-00	METAL GLAZE 470 5% 1/8W
R37	1-216-232-00	METAL GLAZE 27K 5% 1/8W
R38	1-216-206-00	METAL GLAZE 2.2K 5% 1/8W
R39	1-216-194-00	METAL GLAZE 680 5% 1/8W
R41	1-216-226-00	METAL GLAZE 15K 5% 1/8W
R42	1-216-226-00	METAL GLAZE 15K 5% 1/8W
R44	1-216-206-00	METAL GLAZE 2.2K 5% 1/8W
R101	1-216-230-00	METAL GLAZE 22K 5% 1/8W
R102	1-216-230-00	METAL GLAZE 22K 5% 1/8W
R103	1-216-180-00	METAL GLAZE 180 5% 1/8W
R104	1-216-258-00	METAL GLAZE 330K 5% 1/8W
R105	1-216-226-00	METAL GLAZE 15K 5% 1/8W
R106	1-216-230-00	METAL GLAZE 22K 5% 1/8W
R107	1-216-210-00	METAL GLAZE 3.3K 5% 1/8W
R108	1-216-222-00	METAL GLAZE 10K 5% 1/8W
R114	1-216-198-00	METAL GLAZE 1K 5% 1/8W
R116	1-216-238-00	METAL GLAZE 47K 5% 1/8W
R117	1-216-246-00	METAL GLAZE 100K 5% 1/8W
R118	1-216-222-00	METAL GLAZE 10K 5% 1/8W
R119	1-216-226-00	METAL GLAZE 15K 5% 1/8W
R120	1-216-210-00	METAL GLAZE 3.3K 5% 1/8W
R123	1-216-270-00	METAL GLAZE 1M 5% 1/8W
R124	1-216-198-00	METAL GLAZE 1K 5% 1/8W
R129	1-216-230-00	METAL GLAZE 22K 5% 1/8W
R130	1-216-222-00	METAL GLAZE 10K 5% 1/8W
R131	1-216-222-00	METAL GLAZE 10K 5% 1/8W
R133	1-216-206-00	METAL GLAZE 2.2K 5% 1/8W
R134	1-216-222-00	METAL GLAZE 10K 5% 1/8W
R137	1-216-206-00	METAL GLAZE 2.2K 5% 1/8W
R201	1-216-230-00	METAL GLAZE 22K 5% 1/8W
R202	1-216-230-00	METAL GLAZE 22K 5% 1/8W
R203	1-216-180-00	METAL GLAZE 180 5% 1/8W
R204	1-216-258-00	METAL GLAZE 330K 5% 1/8W
R205	1-216-226-00	METAL GLAZE 15K 5% 1/8W
R206	1-216-230-00	METAL GLAZE 22K 5% 1/8W
R207	1-216-210-00	METAL GLAZE 3.3K 5% 1/8W
R208	1-216-222-00	METAL GLAZE 10K 5% 1/8W
R214	1-216-198-00	METAL GLAZE 1K 5% 1/8W
R216	1-216-238-00	METAL GLAZE 47K 5% 1/8W
R217	1-216-246-00	METAL GLAZE 100K 5% 1/8W
R218	1-216-222-00	METAL GLAZE 10K 5% 1/8W
R219	1-216-226-00	METAL GLAZE 15K 5% 1/8W
R220	1-216-210-00	METAL GLAZE 3.3K 5% 1/8W
R223	1-216-270-00	METAL GLAZE 1M 5% 1/8W
R224	1-216-198-00	METAL GLAZE 1K 5% 1/8W
R229	1-216-230-00	METAL GLAZE 22K 5% 1/8W
R230	1-216-222-00	METAL GLAZE 10K 5% 1/8W
R231	1-216-222-00	METAL GLAZE 10K 5% 1/8W
R233	1-216-206-00	METAL GLAZE 2.2K 5% 1/8W
R234	1-216-222-00	METAL GLAZE 10K 5% 1/8W

Ref.No.	Part No.	Description			
R237	1-216-206-00	METAL GLAZE	2.2K	5%	1/8W
R301	1-216-222-00	METAL GLAZE	10K	5%	1/8W
R302	1-216-206-00	METAL GLAZE	2.2K	5%	1/8W
R303	1-216-222-00	METAL GLAZE	10K	5%	1/8W
R304	1-216-206-00	METAL GLAZE	2.2K	5%	1/8W
R305	1-216-222-00	METAL GLAZE	10K	5%	1/8W
R306	1-216-206-00	METAL GLAZE	2.2K	5%	1/8W
R307	1-216-214-00	METAL GLAZE	4.7K	5%	1/8W
R308	1-216-190-00	METAL GLAZE	470	5%	1/8W
R309	1-216-222-00	METAL GLAZE	10K	5%	1/8W
R310	1-216-230-00	METAL GLAZE	22K	5%	1/8W
R311	1-216-230-00	METAL GLAZE	22K	5%	1/8W
R312	1-216-263-00	METAL GLAZE	510K	5%	1/8W
R313	1-216-226-00	METAL GLAZE	15K	5%	1/8W
R314	1-216-192-00	METAL GLAZE	560	5%	1/8W
R317	1-216-246-00	METAL GLAZE	100K	5%	1/8W
R318	1-216-246-00	METAL GLAZE	100K	5%	1/8W
R320	1-216-238-00	METAL GLAZE	47K	5%	1/8W
R321	1-215-460-00	METAL	43K	1%	1/6W
R322	1-216-222-00	METAL GLAZE	10K	5%	1/8W
R323	1-216-222-00	METAL GLAZE	10K	5%	1/8W
R324	1-216-236-00	METAL GLAZE	39K	5%	1/8W
R325	1-216-206-00	METAL GLAZE	2.2K	5%	1/8W
R326	1-216-222-00	METAL GLAZE	10K	5%	1/8W
R327	1-216-198-00	METAL GLAZE	1K	5%	1/8W
R328	1-216-198-00	METAL GLAZE	1K	5%	1/8W
R329	1-216-198-00	METAL GLAZE	1K	5%	1/8W
R330	1-216-198-00	METAL GLAZE	1K	5%	1/8W
R331	1-216-198-00	METAL GLAZE	1K	5%	1/8W
R332	1-216-198-00	METAL GLAZE	1K	5%	1/8W
R333	1-216-198-00	METAL GLAZE	1K	5%	1/8W
R334	1-216-254-00	METAL GLAZE	220K	5%	1/8W
R335	1-216-198-00	METAL GLAZE	1K	5%	1/8W
R336	1-216-246-00	METAL GLAZE	100K	5%	1/8W
R337	1-216-246-00	METAL GLAZE	100K	5%	1/8W
R338	1-216-246-00	METAL GLAZE	100K	5%	1/8W
R339	1-216-246-00	METAL GLAZE	100K	5%	1/8W
R340	1-216-246-00	METAL GLAZE	100K	5%	1/8W
R341	1-216-246-00	METAL GLAZE	100K	5%	1/8W
R342	1-216-246-00	METAL GLAZE	100K	5%	1/8W
R343	1-216-206-00	METAL GLAZE	2.2K	5%	1/8W
R344	1-216-206-00	METAL GLAZE	2.2K	5%	1/8W
R345	1-216-206-00	METAL GLAZE	2.2K	5%	1/8W
R346	1-216-174-00	METAL GLAZE	100	5%	1/8W
R347	1-216-246-00	METAL GLAZE	100K	5%	1/8W
R348	1-216-246-00	METAL GLAZE	100K	5%	1/8W
R349	1-216-198-00	METAL GLAZE	1K	5%	1/8W
R350	1-216-240-00	METAL GLAZE	56K	5%	1/8W
R351	1-216-246-00	METAL GLAZE	100K	5%	1/8W
R352	1-216-254-00	METAL GLAZE	220K	5%	1/8W
R353	1-216-246-00	METAL GLAZE	100K	5%	1/8W
R354	1-216-238-00	METAL GLAZE	47K	5%	1/8W
R355	1-216-198-00	METAL GLAZE	1K	5%	1/8W
R356	1-216-198-00	METAL GLAZE	1K	5%	1/8W
R357	1-216-182-00	METAL GLAZE	220	5%	1/8W
R358	1-216-238-00	METAL GLAZE	47K	5%	1/8W
R359	1-216-222-00	METAL GLAZE	10K	5%	1/8W

Ref.No.	Part No.	Description			
R360	1-216-222-00	METAL GLAZE	10K	5%	1/8W
R361	1-216-222-00	METAL GLAZE	10K	5%	1/8W
R362	1-216-190-00	METAL GLAZE	470	5%	1/8W
R363	1-216-190-00	METAL GLAZE	470	5%	1/8W
R367	1-216-214-00	METAL GLAZE	4.7K	5%	1/8W
R368	1-216-206-00	METAL GLAZE	2.2K	5%	1/8W
R369	1-216-216-00	METAL GLAZE	5.6K	5%	1/8W
R372	1-216-240-00	METAL GLAZE	56K	5%	1/8W
R373	1-216-222-00	METAL GLAZE	10K	5%	1/8W
R374	1-216-222-00	METAL GLAZE	10K	5%	1/8W
R375	1-216-214-00	METAL GLAZE	4.7K	5%	1/8W
R376	1-216-222-00	METAL GLAZE	10K	5%	1/8W
R377	1-216-198-00	METAL GLAZE	1K	5%	1/8W
R378	1-216-240-00	METAL GLAZE	56K	5%	1/8W
R380	1-216-240-00	METAL GLAZE	56K	5%	1/8W
R381	1-216-222-00	METAL GLAZE	10K	5%	1/8W
R382	1-216-206-00	METAL GLAZE	2.2K	5%	1/8W
R383	1-216-214-00	METAL GLAZE	4.7K	5%	1/8W
R384	1-216-254-00	METAL GLAZE	220K	5%	1/8W
R389	1-216-246-00	METAL GLAZE	100K	5%	1/8W
R390	1-216-222-00	METAL GLAZE	10K	5%	1/8W
R392	1-216-134-00	METAL GLAZE	2.2	5%	1/8W
R393	1-216-134-00	METAL GLAZE	2.2	5%	1/8W
R396	1-216-198-00	METAL GLAZE	1K	5%	1/8W
R399	1-216-238-00	METAL GLAZE	47K	5%	1/8W
R501	1-216-220-00	METAL GLAZE	8.2K	5%	1/8W
R502	1-216-214-00	METAL GLAZE	4.7K	5%	1/8W
R503	1-216-278-00	METAL GLAZE	2.2M	5%	1/8W
R504	1-216-190-00	METAL GLAZE	470	5%	1/8W
R507	1-216-134-00	METAL GLAZE	2.2	5%	1/8W
R508	1-216-134-00	METAL GLAZE	2.2	5%	1/8W
R551	1-216-234-00	METAL GLAZE	33K	5%	1/8W
R552	1-216-214-00	METAL GLAZE	4.7K	5%	1/8W
R553	1-216-278-00	METAL GLAZE	2.2M	5%	1/8W
R554	1-216-190-00	METAL GLAZE	470	5%	1/8W
R557	1-216-134-00	METAL GLAZE	2.2	5%	1/8W
R558	1-216-134-00	METAL GLAZE	2.2	5%	1/8W
R591	1-216-222-00	METAL GLAZE	10K	5%	1/8W
R592	1-216-246-00	METAL GLAZE	100K	5%	1/8W
R601	1-216-220-00	METAL GLAZE	8.2K	5%	1/8W
R602	1-216-214-00	METAL GLAZE	4.7K	5%	1/8W
R603	1-216-278-00	METAL GLAZE	2.2M	5%	1/8W
R604	1-216-190-00	METAL GLAZE	470	5%	1/8W
R607	1-216-134-00	METAL GLAZE	2.2	5%	1/8W
R608	1-216-134-00	METAL GLAZE	2.2	5%	1/8W
R651	1-216-234-00	METAL GLAZE	33K	5%	1/8W
R652	1-216-214-00	METAL GLAZE	4.7K	5%	1/8W
R653	1-216-278-00	METAL GLAZE	2.2M	5%	1/8W
R654	1-216-190-00	METAL GLAZE	470	5%	1/8W
R657	1-216-134-00	METAL GLAZE	2.2	5%	1/8W
R658	1-216-134-00	METAL GLAZE	2.2	5%	1/8W
R692	1-216-246-00	METAL GLAZE	100K	5%	1/8W
R701	1-216-176-00	METAL GLAZE	120	5%	1/8W
R702	1-216-176-00	METAL GLAZE	120	5%	1/8W
R703	1-216-176-00	METAL GLAZE	120	5%	1/8W
R704	1-216-176-00	METAL GLAZE	120	5%	1/8W
R705	1-216-183-00	METAL GLAZE	240	5%	1/8W

Ref.No.	Part No.	Description
R706	1-216-183-00	METAL GLAZE 240 5% 1/8W
R707	1-216-183-00	METAL GLAZE 240 5% 1/8W
R708	1-216-183-00	METAL GLAZE 240 5% 1/8W
R709	1-216-176-00	METAL GLAZE 120 5% 1/8W
R710	1-216-183-00	METAL GLAZE 240 5% 1/8W
R791	1-216-262-00	METAL GLAZE 470K 5% 1/8W
R792	1-216-240-00	METAL GLAZE 56K 5% 1/8W
R851	1-216-198-00	METAL GLAZE 1K 5% 1/8W
RV1	1-228-994-00	RES, ADJ, CARBON 10K
RV101	1-226-773-11	RES, ADJ, METAL GLAZE 22K
RV201	1-226-773-11	RES, ADJ, METAL GLAZE 22K
S10	1-572-353-11	SWITCH, SLIDE (R/N)
S11	1-572-352-11	SWITCH, LEAF (FF/REW)
S12	1-554-790-11	SWITCH, POWER (PACK-IN)
S302	1-553-510-00	SWITCH, SLIDE (ACC)
S901	1-570-771-11	SWITCH (POWER)
SW701	1-554-813-41	SWITCH, KEY BOARD (SEEK -/TRACK +)
SW702	1-554-813-41	SWITCH, KEY BOARD (CD)
SW703	1-554-813-41	SWITCH, KEY BOARD (FM/AM)
SW704	1-571-938-21	SWITCH, KEY BOARD (SENS)
SW705	1-571-938-21	SWITCH, KEY BOARD (LOUD)
SW706	1-554-813-41	SWITCH, KEY BOARD (LEVEL -)
SW707	1-571-938-21	SWITCH, KEY BOARD (M.SCAN/A.MEM)
SW708	1-554-813-41	SWITCH, KEY BOARD (MUTE)
SW709	1-554-813-41	SWITCH, KEY BOARD (SHUF 1/1)
SW710	1-554-813-41	SWITCH, KEY BOARD (SHUF 2/2)
SW711	1-554-813-41	SWITCH, KEY BOARD (MTL/3)
SW712	1-554-813-41	SWITCH, KEY BOARD (AMS/4)
SW713	1-554-813-41	SWITCH, KEY BOARD (LEVEL +)
SW714	1-554-813-41	SWITCH, KEY BOARD (SELECT)
SW715	1-554-813-41	SWITCH, KEY BOARD (DOLBY/5)
SW716	1-554-813-41	SWITCH, KEY BOARD (ATA/6)
SW717	1-554-813-41	SWITCH, KEY BOARD (DISC +/MANUAL +)
SW718	1-554-813-41	SWITCH, KEY BOARD (DISC -/MANUAL -)
SW720	1-571-938-21	SWITCH, KEY BOARD (OFF)
SW722	1-571-938-21	SWITCH, KEY BOARD (TAPE)
SW723	1-554-813-41	SWITCH, KEY BOARD (SEEK +/TRACK +)
SW724	1-571-938-21	SWITCH, KEY BOARD (DSPL)
SW725	1-554-813-41	SWITCH, KEY BOARD (RESET)
X1	1-567-250-11	OSCILLATOR, CERAMIC (456kHz)
X2	1-567-848-11	VIBRATOR, CRYSTAL (7.2MHz)
X301	1-567-170-00	OSCILLATOR, CERAMIC (4.19MHz)

ACCESSORY & PACKING MATERIAL

*3-349-488-01	CUSHION (UPPER)
*3-349-489-01	CUSHION (LOWER)
3-336-617-01	BAG, PROTECTION
*3-358-641-01	INDIVIDUAL CARTON
3-751-747-21	MANUAL, INSTRUCTION
3-751-748-21	MANUAL, INSTRUCTION

MOUNTING HARDWARE

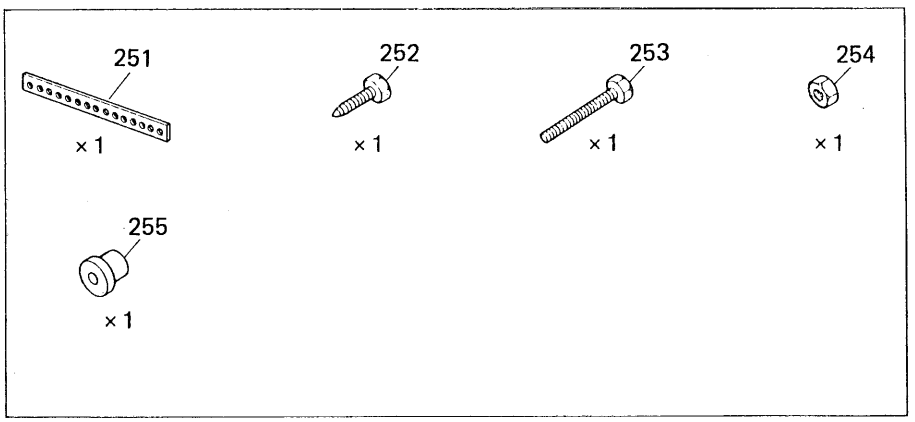

No.	Part No.	Description	Remarks
251	3-310-655-01	SUPPORT (ND), FITTING	
252	3-302-126-01	SCREW, TAPPING (DIA. 5X20)	
253	7-682-583-04	SCREW +P 5X40	
254	7-684-025-04	N 5, TYPE 2	
255	3-349-410-01	BUSHING	

9-955-944-11

Sony Corporation
Mobile Electronics Group

English
90F0525-1
Printed in Japan
© 1990. 6

Published by Customer Relations and Service Group